

## Z1 Injector Adapter Install Manual

### Contents:

- 6 Aluminum Injector Caps
- 6 Aluminum Lower Injector Adapters
- 6 Lower Injector Adapter O-Rings
- 6 Injector Plugs
- 12 Stainless Steel Hex Head Bolts
- 12 Stainless Steel Lock Washers
- 1 Tube of Silicone Lubricant



Step 1: Gather parts required for each injector.

Step 2: Place O-rings on the new style injector.

Note: USE THE SUPPLIED LUBRICANT TO HELP INSTALL O-RINGS!!!  
You can normally roll the O-rings onto the injector.





Step 3: Install the lower injector adapter. This is done by pushing the injector into the lower injector adapter.

AGAIN, USE LUBE!

If the O-ring pinches instead of seating correctly gas will stream into the cylinder instead of being controlled by the injector.

Step 4: Install the injector into the fuel rail by pushing down until it seats. Place the injector cap on top of the injector.

MAKE SURE YOU HAVE LUBE ON THE O-RINGS BEFORE TRYING TO PUSH THEM IN!!!!



Step 5: Use an allen wrench to tighten the injector cap to the fuel rail and admire your finished product.

Did you remember the lube?