


## Premium Short Throw Shifter



### Parts List


- ① Premium Short throw shifter
- ② Spacer
- ③ Plate cover
- ④ M5 Cap bolt set (w/washer)
- ⑤ M8 Cap bolt set (w/spring washer & nut)
- ⑥ Thrust Washer
- ⑦ Bolt/nut set (Bolt1, Nut2)
- ⑧ Large Washer

### Removal

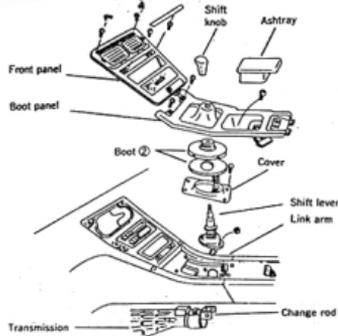

1. Remove the front panel, boot panel and shift knob.
  - Front panel : 4 screws and clock coupler
  - Boot panel : 3 screws and 2 couplers
2. Remove 2 boots and cover fitted to the shifter. (4 bolts and 1 nut)
3. Remove the change rod fitted under the shifter and remove the bolt and nut fitting the link arm and then remove the shifter.
4. Remove the cover, rubber boot and bushing from the shifter. When removing the collar, use a hammer.


### Installation

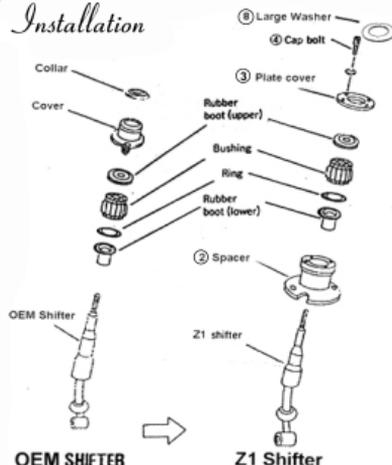

#### OEM SHIFTER

#### Z1 Shifter

1. Fit the OEM parts (rubber boot, bushing & etc.) and provided spacer and plate cover to shifter as shown in Figure. Apply grease to the bushing. OEM collar and cover are not utilized.
2. Install all other parts to the original position and install Z1 shifter and shift link arm with

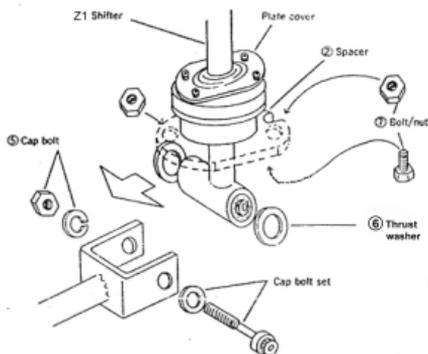

- provided bolt and then install the change rod. In this case, remove the tape covering the shifter before installing the change rod.
3. Install the cover, boot and Panel.