



NISSAN GENUINE PARTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION: Fog light Kit

2. APPLICATION: Titan SE, and XE 4WD

3. PART NUMBER: 999F1 YQ001 (vehicles w/o auto-headlamps)

4. KIT CONTENTS:

<u>Item No.</u>	<u>Qty</u>	<u>Part Number</u>	<u>Description</u>
1)	1	26150 ZE00A	RH fog lamp assembly
2)	1	26155 ZE00A	LH fog lamp assembly
3)	1	25540 EE90E	Turn signal switch w/fog contr w/o auto headlamps
4)	4	26399 40U00	Grommet
5)	2	12-21 0010U	5mm hex nut

5. TOOLS REQUIRED:

- Ratchet with 5mm hex socket.
- Clean rag
- Masking Tape
- #2 Phillips Screwdriver
- Flat-bit screwdriver wrapped in electrical tape at end.

6. INSTALLATION PRECAUTIONS / NOTES:

- 1) Be sure that vehicle engine is off during the installation
- 2) Be careful not to damage the vehicle or components during the installation.
- 3) Clean fog lamp openings with clean rag before installation.
- 4) The electrical tape wrapped around flat-bit screwdriver is used to prevent scratching of plastic trim.
- 5) Apply masking tape as shown in Figure 1 to prevent marring the fascia surface.

INSTALLATION INSTRUCTIONS – FOG LIGHT KIT

7. INSTALLATION PROCEDURE:

Figure 1

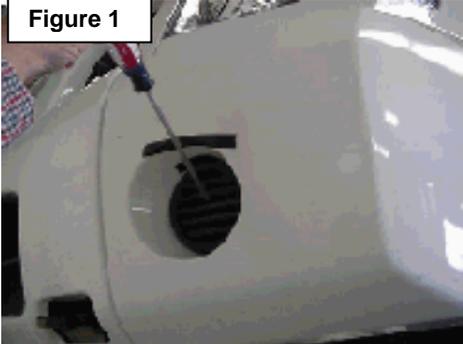


Figure 2


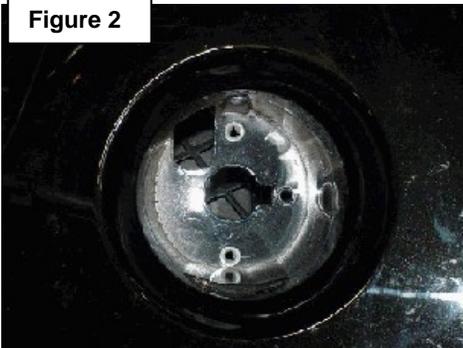


Figure 3



Figure 4

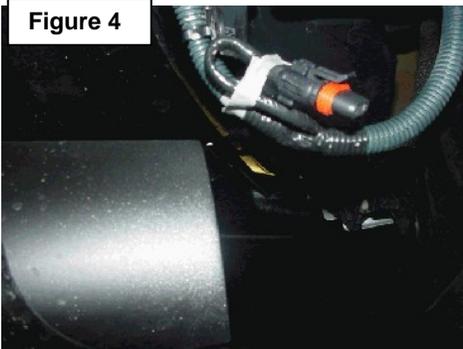

- 1) Remove the LH front trim finisher covering the fog lamp opening: Insert a flat bit screwdriver into the center of the bezel as shown and pry up. Discard the finisher.
Note: Be careful not to scratch the fascia. (See Figure 1)
- 2) Insert two (2) nylon grommets into the two holes at the top and bottom of center. Ensure that the grommets are pushed in until they are flush with wall. (Figure 2)
- 3) Insert the LH fog lamp assembly P/N 26155 ZE00A into the opening. Line up the stud, the guiding tab and the two grommet inserts and insert in until fog lamp assembly “snaps” into place.
- 4) Screw the 5mm nut onto the fog lamp assembly stud by reaching around front fascia and by hand engaging the nut to the stud and initiating the threading. Using 5mm socket wrench, tighten the nut in place. (Figure 3)
- 5) Locate the vehicle pre-wired fog lamp connector behind the front fascia near fog lamp opening and connect it to the fog lamp assembly’s connector receptacle. (Figure 4)
- 6) Repeat steps (1) – (5) to install the RH fog lamp assembly P/N 26150 ZE00A.
- 7) Remove the three screws holding the steering wheel column trim together using #2 Phillips screwdriver. Keep the screws for reinstallation.
Note: For vehicles with transmission shifter located on steering column you must pry off the small circular trim finisher on driver side and disengage Phillip screw before trim can be removed.
- 8) Remove the upper trim piece from the steering wheel assembly. Place in safe location and do not scratch or damage.
Note: For vehicles with transmission shifter located on steering column, upper trim piece cannot be removed. Move upper trim piece enough to gain

INSTALLATION INSTRUCTIONS – FOG LIGHT KIT

Figure 5



Figure 6



Figure 7



access to turn signal stalk switch.

- 9) Remove the turn signal stalk switch by depressing the top locking tab with finger and using flat-bit screwdriver to depress the lower locking tab. Disengage the stalk switch by pulling it towards driver side with locking tabs depressed. (Discard the stalk switch). (Figure 5)
- 10) Install the fog lamp turn signal switch by lining up the connector and inserting until it “clicks” into place.
- 11) Reinstall the steering wheel assembly upper trim piece. Ensure that trim is properly lined up and “snaps” into place.
- 12) Reinstall the three (3) Phillip head screws into the trim. Hold the trim together while tightening the screws. Visually inspect the trim to ensure that all mating areas line up properly. (Figure 6)
- 13) Perform a functional check of the fog lamp system. The fog lamps should only operate in conjunction with the low beam headlights. (Figure 7)
 - a) Turn on the low beam headlights.
 - b) With the low beam headlights on, the fog lamps should turn off and on with the fog lamp switch.
 - c) With the headlights on, switch to high beam mode. The fog lamps should turn off.
 - d) With the low beam headlights on, switch the headlights to parking lights only, the fog lamps should turn off.