

# TEQSPORT GR86 COOLANT BLEEDER PORT INSTALLATION MANUAL



This Installation Manual is intended for the following models:	
2022+	Subaru BRZ
2022+	Toyota GR86
2012-2016	Scion FR-S
2017-2021	Toyota 86
2013-2020	Subaru BRZ

**PROLOGUE:**

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

**WARNING!**

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the TEQSPORT GR86 Coolant Bleeder Port, consult with a Professional Mechanic, or contact TEQSPORT for more information.

## PARTS INCLUDED:

Item	Quantity	Description
1	1	Bleeder Port

## TOOLS REQUIRED:

- Pliers
- Rags
- Coolant

## SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Only operate drivetrain in a safe space and well-ventilated areas.

## BEFORE YOU BEGIN:

Remove contents from the TEQSPORT GR86 Aluminum Coolant Bleeder Port and verify that ALL necessary hardware is present.

## PROCEDURE:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Open and support the hood of the vehicle.
3. If the engine was recently run, allow ample time for the Engine Coolant to cool. Opening the system will lead to spilled coolant and can burn you.
4. Once the engine has cooled, loosen the (2) two Hose Clamps on the OE Coolant Bleeder. The Bleeder is on the backside of the engine. *Figure 1.*

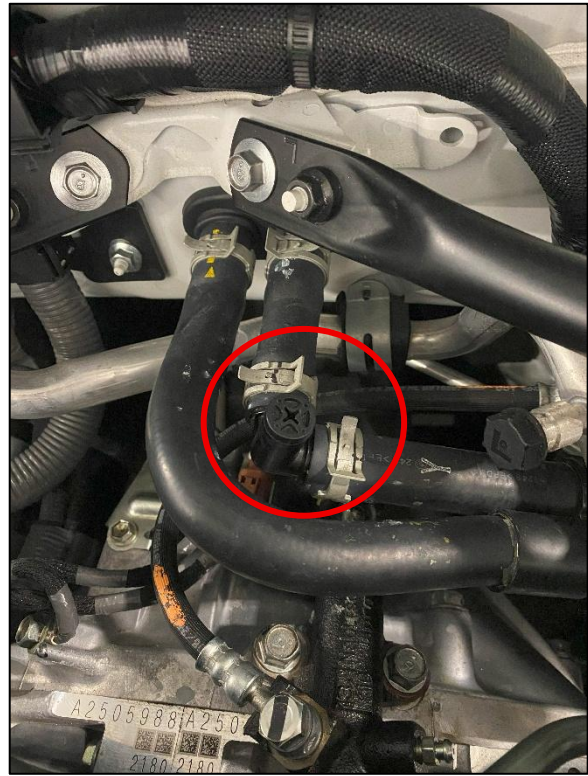
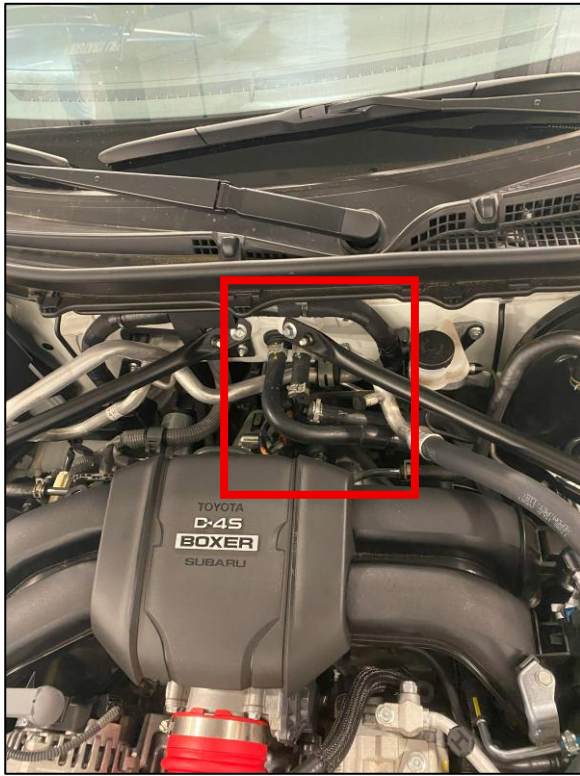


Figure 1

5. Pinch the Hoses if you have the proper tools. This will minimize the amount of spilled coolant. *Figure 2.*

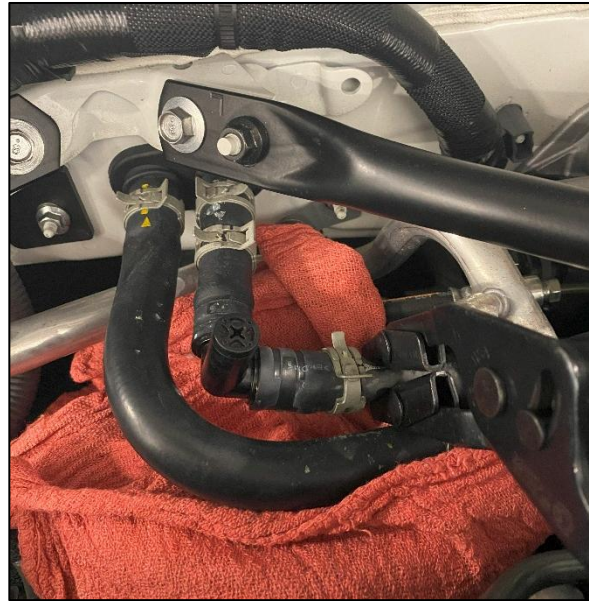


Figure 2

6. Remove the OE Coolant Bleeder from the vehicle. Coolant will spill out of the hoses, prepare some rags to catch any drained fluid. *Figure 3.*

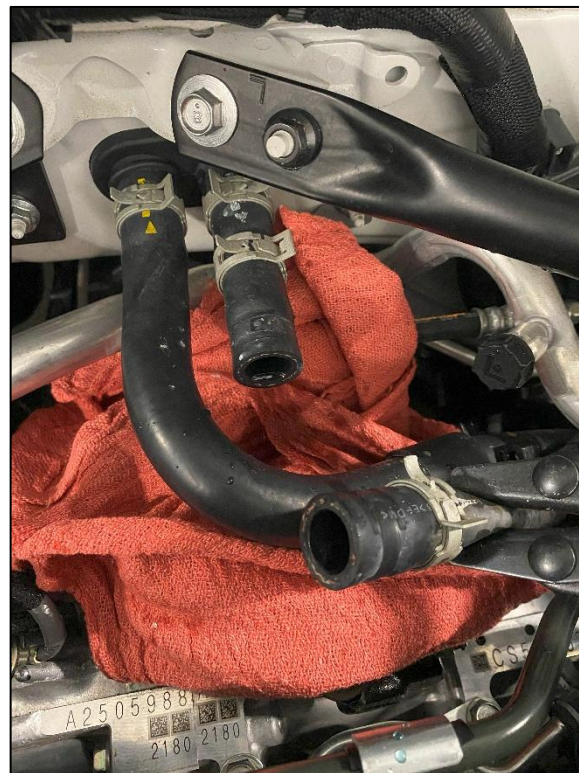


Figure 3

7. Install the TEQSPORT Aluminum Coolant Bleeder in the same spot and orientation as the OE Bleeder. Secure with the OE Hose Clamps once positioned. *Figure 4.*
8. Refill and Bleed the Coolant System in accordance with the Factory Service Manual. The TEQSPORT Coolant Bleeder can be cracked open with a Hex Key to properly bleed the system.

END

Additional Technical Support:  
Contact TEQSPORT at [info@teqsport.com](mailto:info@teqsport.com)  
Or call 770-832-7184 between 9am and 6pm ET