

TEQSPORT GR86/BRZ INTAKE RESONATOR DELETE INSTALLATION MANUAL

**This Installation Manual is intended for the following models:**

2022+	Toyota GR86
2022+	Subaru BRZ

PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the TEQSPORT GR86/BRZ Intake Resonator Delete, consult with a Professional Mechanic, or contact TEQSPORT for more information.

PARTS INCLUDED:

Item	Quantity	Description
1	1	Box Plug
2	1	Tube Plug
3	1	M6 x 1.0 Socket Head Screw

TOOLS REQUIRED:

- Allen/Hex Keys
- Screwdrivers

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Only operate drivetrain in a safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the TEQSPORT GR86/BRZ Intake Resonator Delete and verify that ALL necessary hardware is present.

PROCEDURE:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Open and support the hood of the vehicle.
3. Loosen the Hose Clamp from the Intake Air Box to the Intake Hose.
4. Disconnect the MAF Connector.
5. Remove the (2) two bolts securing the Intake Box to the Core Support and remove the Air Box from the vehicle.
6. Remove the (2) two OE Screws securing the Resonator to the Air Box and remove the Resonator.
Figure 1.

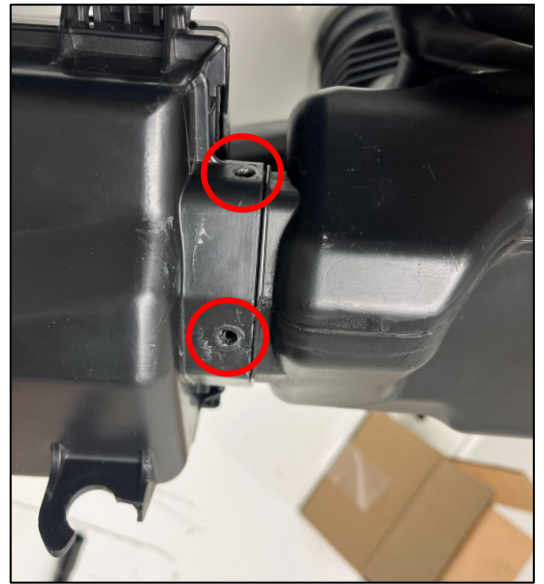


Figure 1

7. Locate the Box Plug and the M6 Socket Head Screw. Install the Box Plug into the Air Box and secure with the M6 Screw. *Figure 2.*



Figure 2

8. Remove the Resonator from the Intake Tube. *Figure 3.*



Figure 3

9. Locate the Tube Plug. Install it into the Intake Tube. *Figure 4.*



Figure 4

10. Reinstall the Air Box into the vehicle by following Steps 3-5 in reverse order.

END

Additional Technical Support:

Contact TEQSPORT at info@teqsport.com
Or call 770-832-7184 between 9am and 6pm ET