

Z1 D41 FRONTIER PHONE MOUNT INSTALLATION MANUAL



This Installation Manual is intended for the following models:	
2022+	Nissan Frontier (D41)

PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Off-Road D41 Frontier Phone Mount, consult with a Professional Mechanic, or contact Z1 Off-Road for more information.

PARTS INCLUDED:

Item	Quantity	Description
1	1	Bracket
2	1	Lock Washer
3	1	Bolt
4	1	Pivot Ball
5	1	Lock Collar
6	1	Magnetic Sticker
7	1	Magnetic Mount
8	1	Hex Key
Optional:		
9	1	Wireless Charging Cable

TOOLS REQUIRED:

- Philips Head Screwdriver

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Only operate drivetrain in safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the Z1 Off-Road D41 Frontier Phone Mount and verify that ALL necessary hardware is present.

PROCEDURE:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Open the Glove Box on the passenger side of the vehicle.
3. Remove the (3) three screws on top of the Glove Box. *Figure 1.*



Figure 1

4. Close the Glove Box and remove the (2) two screws underneath the Glove Box. *Figure 2.*



Figure 2

5. Pull up a section of the Weather Stripping on the door and pull the plastic trim away from the door slightly. *Figure 3.*



Figure 3

6. Pull towards the rear of the car, remove the Glove Box, and disconnect the Electrical Connector. *Figure 4.*



Figure 4

7. Locate the Phone Bracket, Bolt, Lock Washer, and Pivot Ball. Place the Lock Washer over the Bolt and insert it through the back of the Phone Mount Bracket. Screw the Pivot Ball onto the Bolt and tighten the bolt with the provided Hex Key. *Figure 5.*

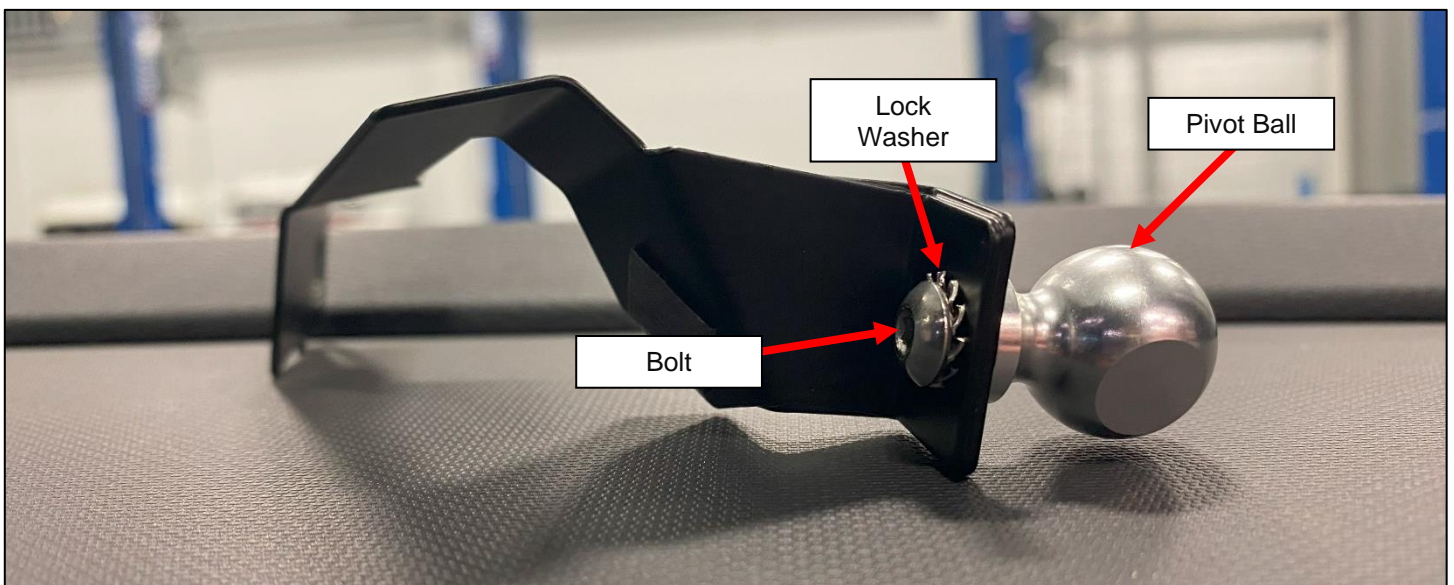


Figure 5

8. Peel the cover off of the Double-Sided tape on the Phone Mount Bracket and position the bracket in the Glove Box area as shown below. *Figure 6.*



Figure 6

9. Reinstall the Glove Box into the Dash and reinstall the (5) five screws removed in *Steps 3-4.* *Figure 7.*



Figure 7

10. Locate the Magnetic Mount and Lock Collar. Place the Lock Collar onto the Pivot Ball, and then place the Magnetic Mount into the Lock Collar. Tighten the Lock Collar against the Magnetic Mount. *Figure 8.*

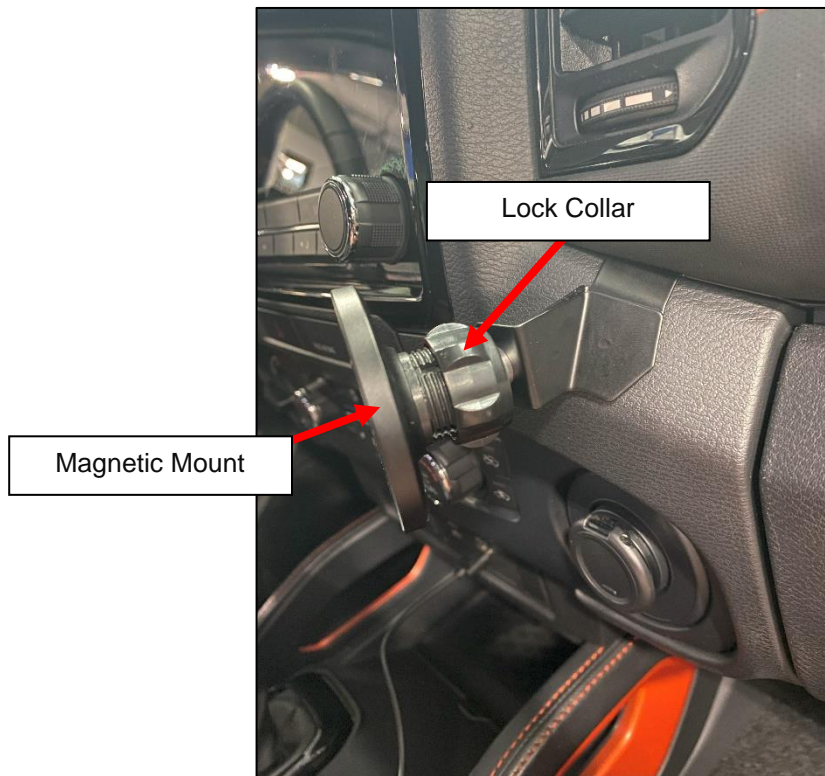


Figure 8

11. Locate the Magnetic Decal. Clean the back surface of your phone and apply the Magnetic Decal.

12. If you are using the Wireless Charging, plug the included Cable into the Base of the Magnetic Mount and the USB Port of the vehicle. *Figure 9.*

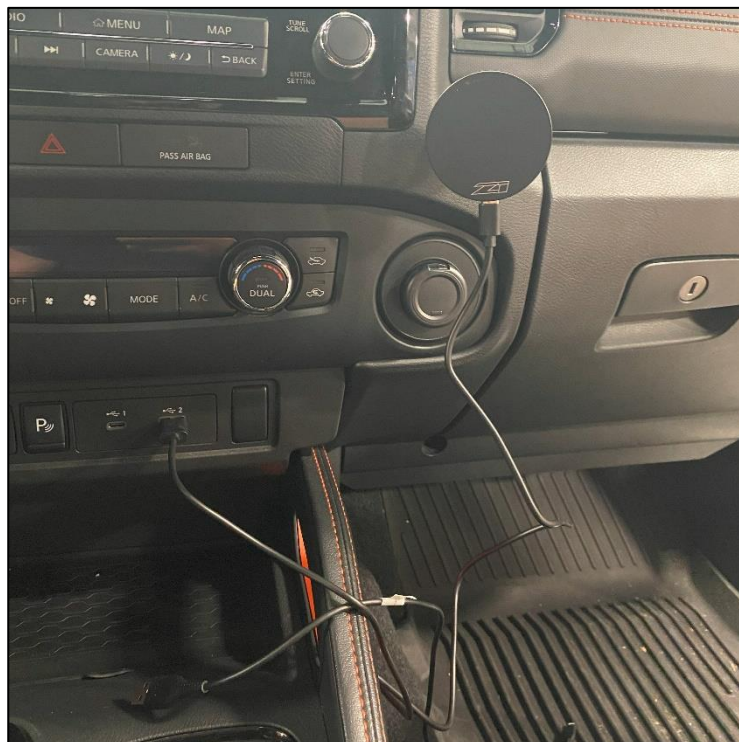


Figure 9

13. Attach your Phone to your Phone Mount. *Figure 10.*



Figure 10

END

Additional Technical Support:
Contact Z1 Off-Road at info@z1offroad.com
Or call 678-839-8019 between 9am and 6pm ET