

Z1 D41 FRONTIER TOW RECOVERY POINTS INSTALLATION MANUAL



This Installation Manual is intended for the following models:

2022+

Nissan Frontier

PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Off-Road D41 Frontier Tow Recovery Points, consult with a Professional Mechanic, or contact Z1 Off-Road for more information.

PARTS INCLUDED:

Item	Quantity	Description
1	2	Tow Hook
2	4	M12 x 1.25 Flanged Hex Head Bolt, 50mm
3	2	Shackle (Optional)

TOOLS REQUIRED:

- Ratchet
- Ratchet Extension(s)
- Assorted Metric Sockets
- Assorted Metric Wrenches

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Only operate drivetrain in safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the Z1 Off-Road D41 Frontier Tow Recovery Points and verify that ALL necessary hardware is present.

PROCEDURE:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Locate the OEM Tow Hooks. Remove the (2) two bolts securing each Tow Hook to the vehicle and remove the Tow Hook. *Figure 1.*



Figure 1

3. Optionally, you can trim the Bumper Trim for the new Tow Hooks but it is not required. Trim as shown below if desired. *Figure 2.*

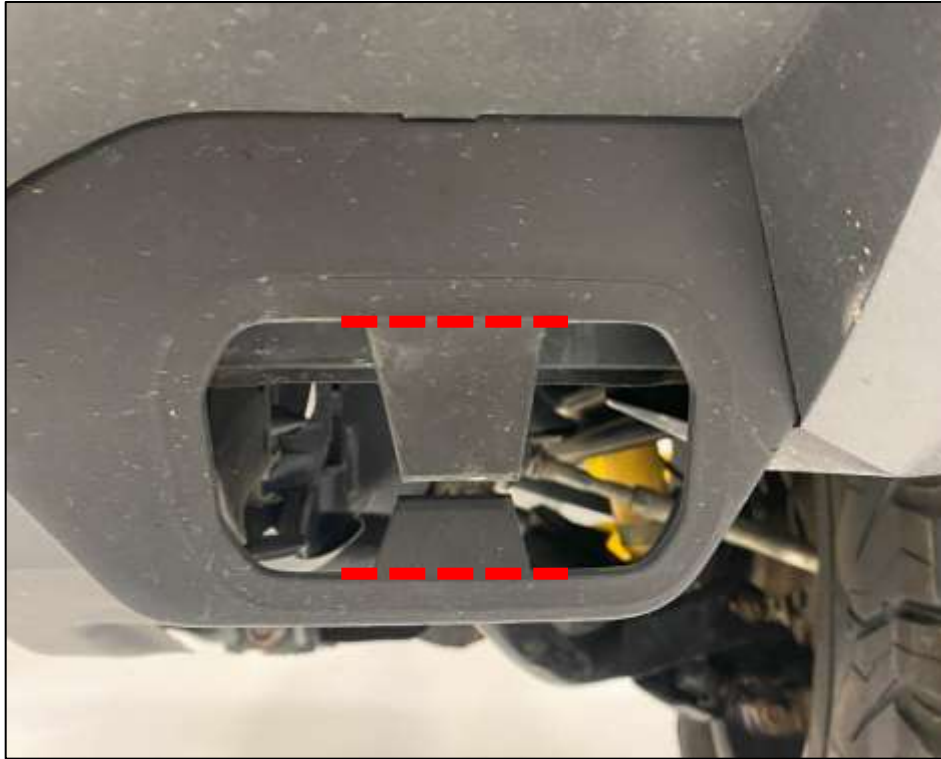


Figure 2

4. Locate the new Tow Hook and (2) two M12 x 1.25 Flanged Hex Head Bolts. Position the Tow Hook onto the Frame as shown below and secure with the M12 Bolts. Repeat for both sides of the vehicle. *Figure 3.*

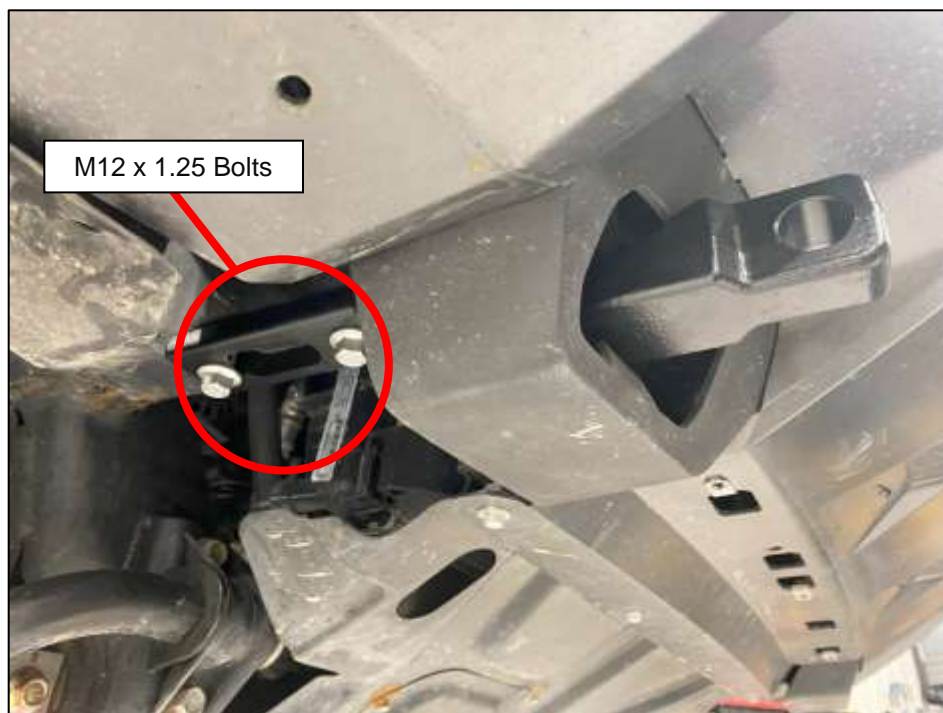


Figure 3

5. Install optional Shackles into the Tow Hook mounting points. *Figure 4.*



Figure 4

END

Additional Technical Support:
Contact Z1 Off-Road at info@z1offroad.com
Or call 678-839-8019 between 9am and 6pm ET