

# ZI FRONTIER RAPTOR-STYLE GRILLE LIGHT KIT INSTALLATION MANUAL



This Installation Man	ual is intended for the following models:
2022+	Nissan Frontier (D41)

#### PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

#### WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Off-Road Frontier Raptor-Style Grille Light Kit, consult with a Professional Mechanic, or contact Z1 Off-Road for more information

Pagali Parti	#23200-IM Revision A	06/21/2024	JS
--------------	----------------------	------------	----

#### **PARTS INCLUDED:**

Item	Quantity	Description
1	1	Grille Light Harness
2	1	Add-A-Circuit Fuse
3	4	Light Bracket
4	8	M3 x 8mm Thumb Screw
5	8	M3 x 0.5 Hex Nut
6	4	Zip Tie

# **TOOLS REQUIRED:**

- Ratchet
- Ratchet Extension(s)
- Assorted Metric Sockets
- Assorted Metric Wrenches

### **SAFETY REQUIREMENTS:**

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Only operate drivetrain in safe space and well-ventilated areas.

### **BEFORE YOU BEGIN:**

Remove contents from the Z1 Off-Road Frontier Raptor-Style Grille Light Kit and verify that ALL necessary hardware is present.

Page <b>  2</b>	Part #23200-IM	Revision A	06/21/2024	JS
-----------------	----------------	------------	------------	----

## **PROCEDURE:**

- 1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
- 2. Open and support the hood of the vehicle.
- 3. Disconnect the **NEGATIVE (-)** battery terminal.
- 4. Locate the (4) four Brackets and the Wiring Harness with Lights. Attach (1) one Light to each Bracket as shown below. *Figure 1*.

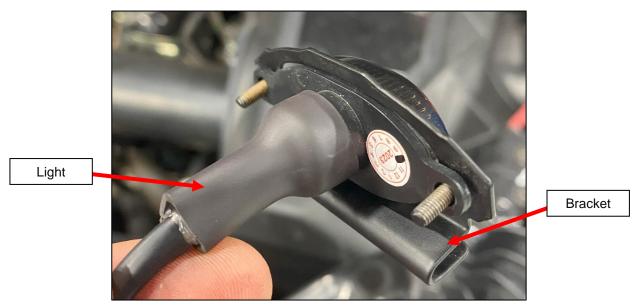


Figure 1

5. Locate (8) eight M3 Hex Nuts. Secure the Lights to the Brackets with the Hex Nuts. Figure 2.

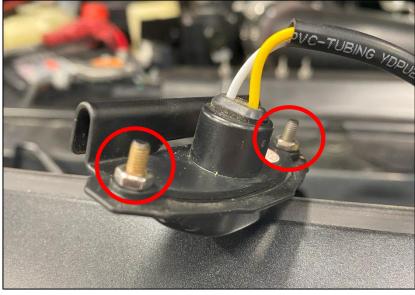


Figure 2

	ſ	Page   <b>3</b>	Part #23200-IM	Revision A	06/21/2024	JS
--	---	-----------------	----------------	------------	------------	----

6. Position the lights on the inside of the grille. We spaced them as shown below. Figure 3.





Figure 3

7. Locate (8) eight M3 Thumb Screws. Insert (2) two Thumb Screws into each bracket and tighten them to secure the brackets to the grille. *Figure 4*.

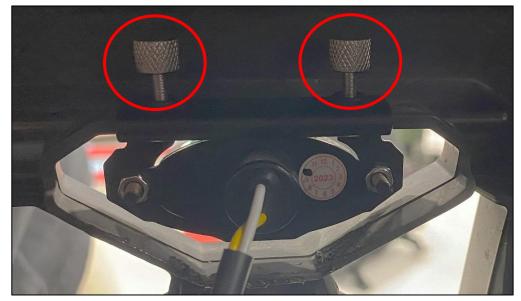


Figure 4

8. Run the Wiring Harness to the Fuse Box in the passenger side of the engine bay. There are multiple ways to run the wire. We ran ours through the Core Support, in front of the battery, and between the Coolant Reservoir Tank. *Figure 5*.

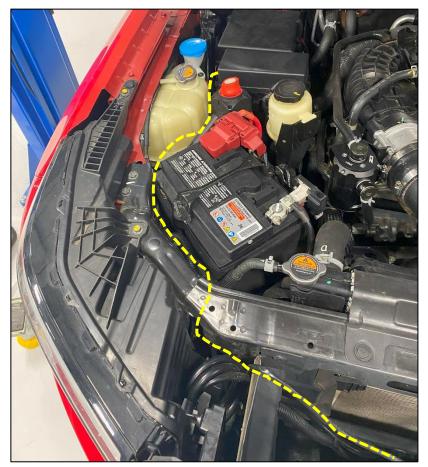


Figure 5

Page 1 <b>5</b>	Part #23200-IM	Revision A	06/21/2024	JS

- 9. Open the Fuse Box and determine the fuse you want to tap into with the lights. We chose the ABS Module fuse, as it gets Ignition Power. Use your Owners Manual for a Fuse Box Diagram to determine the proper fuse.
- 10. Remove the desired fuse, and install the Add-a-Circuit into the now open slot. Figure 6.

**NOTE**: Be aware of the Amperage of the fuse being removed. The Add-a-Circuit uses a 10 Amp fuse, and may need to be swapped out if you choose to tap into a 15 or 20 Amp location.

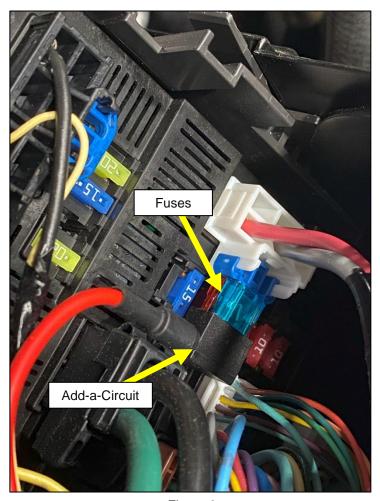


Figure 6

11. Remove a body bolt near the Fuse Box and attach the ground wire from the wiring harness. Reinstall the bolt to secure the ground wire. *Figure 7.* 

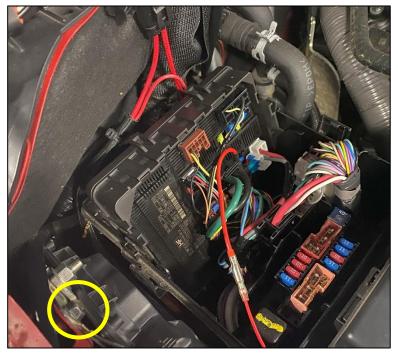


Figure 7

12. Notch the corner of the Fuse Box so the Wiring Harness can run into the Fuse Box without being pinched. *Figure 8.* 





Figure 8

- 13. Locate the supplied Zip Ties, and secure the Wiring Harness to the vehicle. There are multiple places that the Wiring Harness can be secured, and is dependent on how the Wiring Harness was ran to the Fuse Box.
- 14. Reconnect the **NEGATIVE (-)** terminal of the battery.
- 15. Turn the vehicle on and test the function of the Raptor Lights.



Installed Frontier Grille/Raptor Lights

# **END**

#### **Additional Technical Support:**

Contact Z1 Off-Road at <a href="mailto:info@z1offroad.com">info@z1offroad.com</a>
Or call 678-839-8019 between 9am and 6pm ET

Page   8 Page   Page	art #23200-IM Revision A	06/21/2024	JS
---	--------------------------	------------	----