

Z1 FRONTIER/XTERRA BODY MOUNT COVERS INSTALLATION MANUAL



This Installation Manual is intended for the following models:	
2005+	Nissan Frontier
2005-2015	Nissan Xterra
2005-2012	Nissan Pathfinder

PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Off-Road Frontier/Xterra Body Mount Covers, consult with a Professional Mechanic, or contact Z1 Off-Road for more information.

PARTS INCLUDED:

Item	Quantity	Description
1	2	Mount Cover
2	2	M8 x 1.25 Flanged Button Head Screw, 20mm
3	2	M8 x 1.25 Flanged Nut

TOOLS REQUIRED:

- Ratchet
- Ratchet Extension(s)
- Assorted Metric Sockets
- Allen/Hex Keys

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Only operate drivetrain in safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the Z1 Off-Road Frontier/Xterra Body Mount Covers and verify that ALL necessary hardware is present.

PROCEDURE:

1. Position the Body Mount Cover over the Front Frame Mount. *Figure 1.*

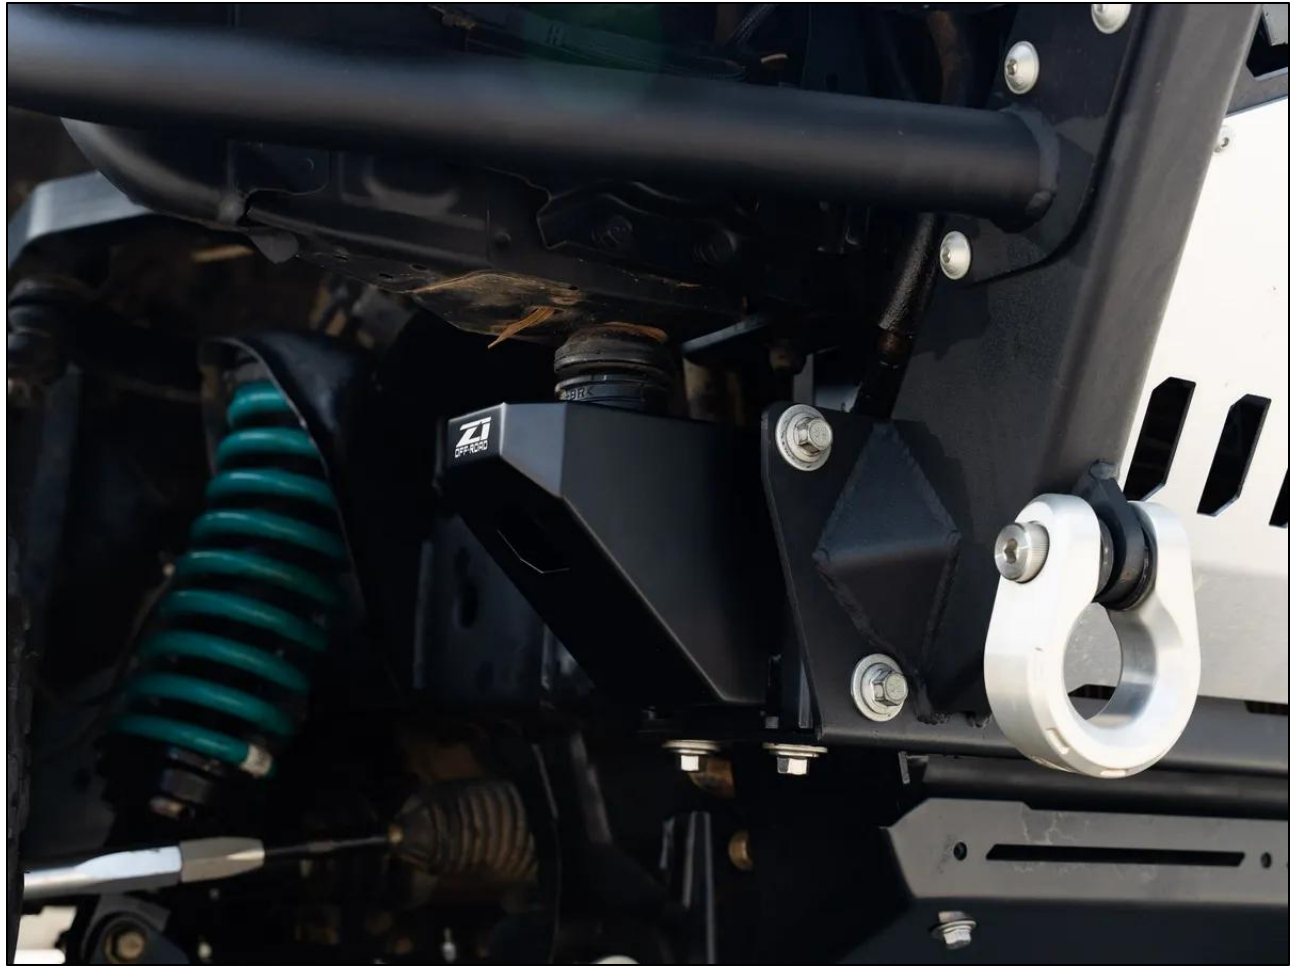


Figure 1

2. Secure the Body Mount Cover to the Frame with the Flanged Button Head Screw through the top of the Cover/Frame Mount and secure with a nut on the bottom. *Figure 2.*



Figure 2



END

Additional Technical Support:
Contact Z1 Off-Road at info@z1offroad.com
Or call 678-839-8019 between 9am and 6pm ET