

# Z1 UTILITY TRACK SPARE TIRE MOUNT INSTALLATION MANUAL



This Installation Manual is intended for the following models:	
2005-2021	Nissan Frontier (D40)
2022+	Nissan Frontier (D41)
2004-2015	Nissan Titan (A60)
2015+	Nissan Titan (A61)

## PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

## WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Off-Road Utility Track Spare Tire Mount, consult with a Professional Mechanic, or contact Z1 Off-Road for more information.

## **PARTS INCLUDED:**

Item	Quantity	Description
1	2	Spare Tire Side Mounts
2	1	Spare Tire Chock
3	1	Y-Strap (Optional)

## **TOOLS REQUIRED:**

- None

## **SAFETY REQUIREMENTS:**

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Only operate drivetrain in safe space and well-ventilated areas.


## **BEFORE YOU BEGIN:**

Remove contents from the Z1 Off-Road Utility Track Spare Tire Mount and verify that ALL necessary hardware is present.

This product requires the use of Cab Side Utility Track Panels and Truck Bed Floor Utility Track Panels.


## **PROCEDURE:**

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Locate the (2) two Spare Tire Side Mounts. Position Spare Tire Side Mounts into the Cab Side Utility Track as shown, then rotate 90°. Once rotated, turn the Cleat clockwise to tighten the Side Mount to the Utility Track. Repeat the process for the second Side Mount. These may need to be adjusted in width once the Spare Tire is positioned. *Figure 1.*

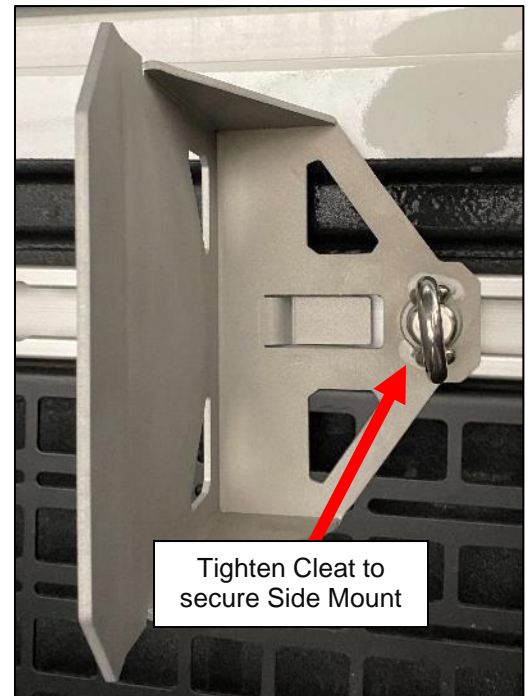

*Figure 1*

3. Locate the Spare Tire Chock. Position the Spare Tire Chock into the Bed Floor Utility Track as shown, then rotate 90°. Once rotated, turn the Cleat clockwise to tighten the Tire Chock to the Utility Track. This may need to be repositioned once the Spare Tire is installed. *Figure 2.*

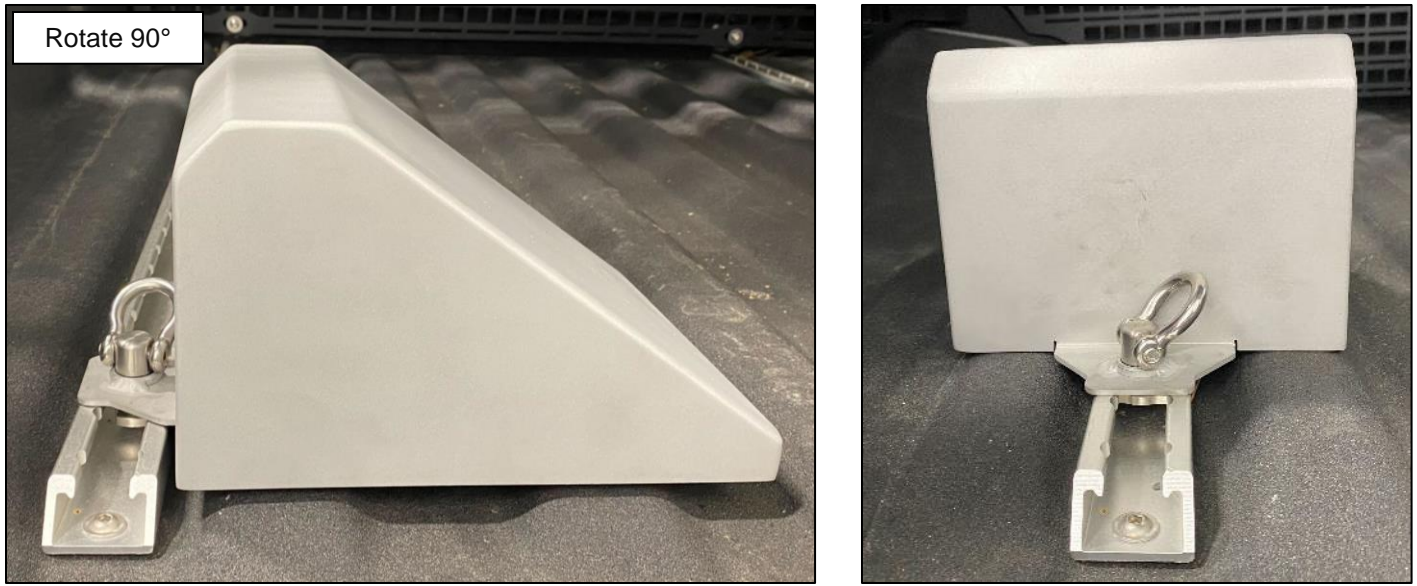

*Figure 2*

4. Position your Spare Tire between the Cab Side of the Bed and the Spare Tire Chock. Adjust the Spare Tire Chock as necessary, making sure to tighten the Cleat afterwards.
5. Adjust the Spare Tire Side Mounts as necessary to secure the Spare Tire.
6. Locate a Y-Belt. Secure the Side Mounts Cleats to the Spare Tire Chock Cleat, with the Y-Belt on top of the Spare Tire. Use the Ratcheting system of the Y-Belt to properly tighten and secure the Spare Tire to the vehicle.



*Installed Utility Track Spare Tire Mount*

**END**

**Additional Technical Support:**  
Contact Z1 Off-Road at [info@z1offroad.com](mailto:info@z1offroad.com)  
Or call 678-839-8019 between 9am and 6pm ET