


Z1 XTERRA FLOOR UTILITY TRACK INSTALLATION MANUAL

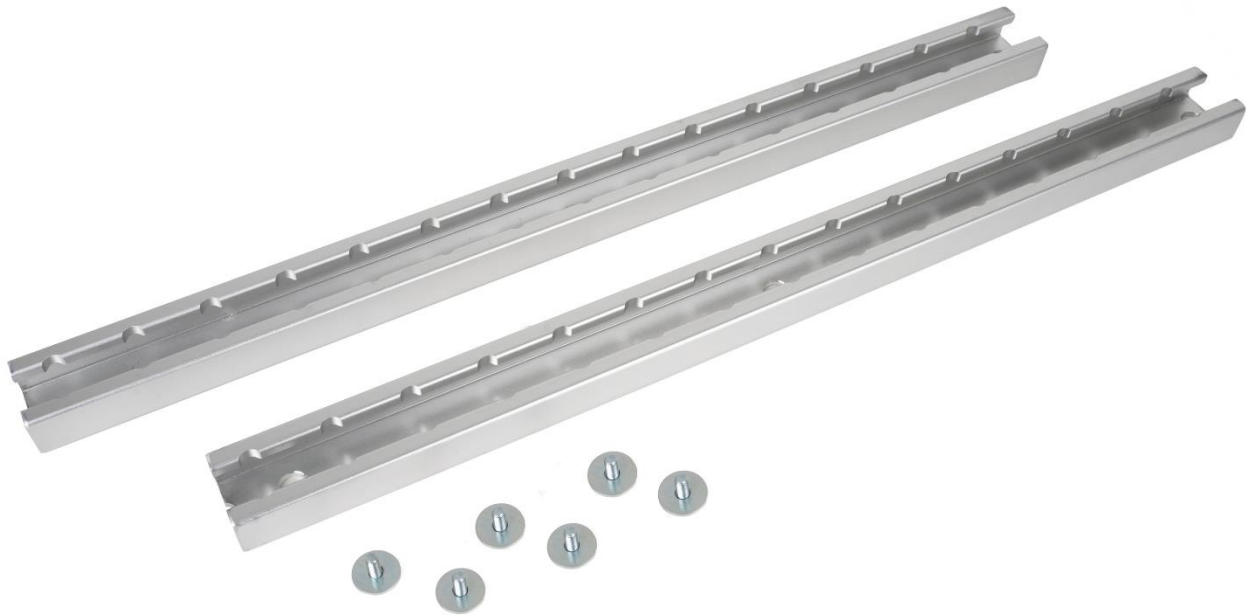

This Installation Manual is intended for the following models:

2005-2015

Nissan Xterra

PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Off-Road Xterra Floor Utility Track, consult with a Professional Mechanic, or contact Z1 Off-Road for more information.

PARTS INCLUDED:

Item	Quantity	Description
1	2	Utility Track
2	6	M6 Button Head Screw
3	6	M6 Oversized Washer

TOOLS REQUIRED:

- Ratchet
- Ratchet Extension(s)
- Assorted Metric Sockets
- Assorted Metric Wrenches
- Allen/Hex Head Sockets
- Clippers

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Only operate drivetrain in safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the Z1 Off-Road Xterra Floor Utility Track and verify that ALL necessary hardware is present.

PROCEDURE:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Open the rear hatch of the vehicle.
3. Starting on either side of the rear floor, remove the (3) three bolts securing the OE Rail. Depending on the year, some will have a Hex Bolt or an Allen Bolt. *Figure 1.*



Figure 1

4. Unclip the tab securing the plastic trim piece to the OE Rail. *Figure 2.*

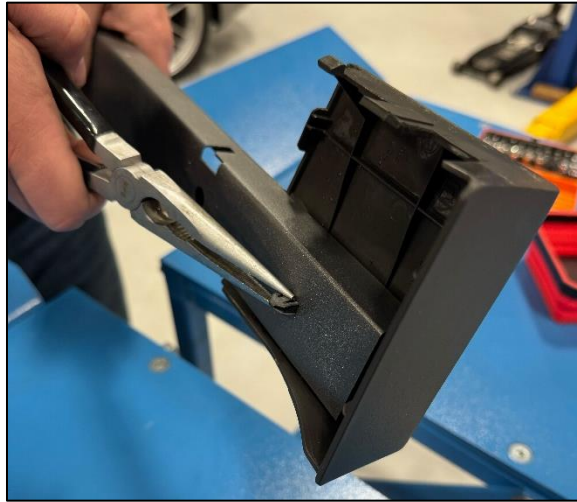


Figure 2

5. Using Snips or a similar tool, remove the small plastic tabs in the OE Rail Channel. *Figure 3.*



Figure 3

6. Place (1) one Utility Track into the channel and secure with (3) three M6 Button Head Screws with an Oversized Washer. *Figure 4.*



Figure 4

7. Reinstall the OE Trim piece removed in *Step 4.*
8. Repeat *Steps 3-7* for the other side of the hatch.

END

Additional Technical Support:
Contact Z1 Off-Road at info@z1offroad.com
Or call 678-839-8019 between 9am and 6pm ET