


Z1 370Z ABS SIDE SKIRTS INSTALLATION MANUAL

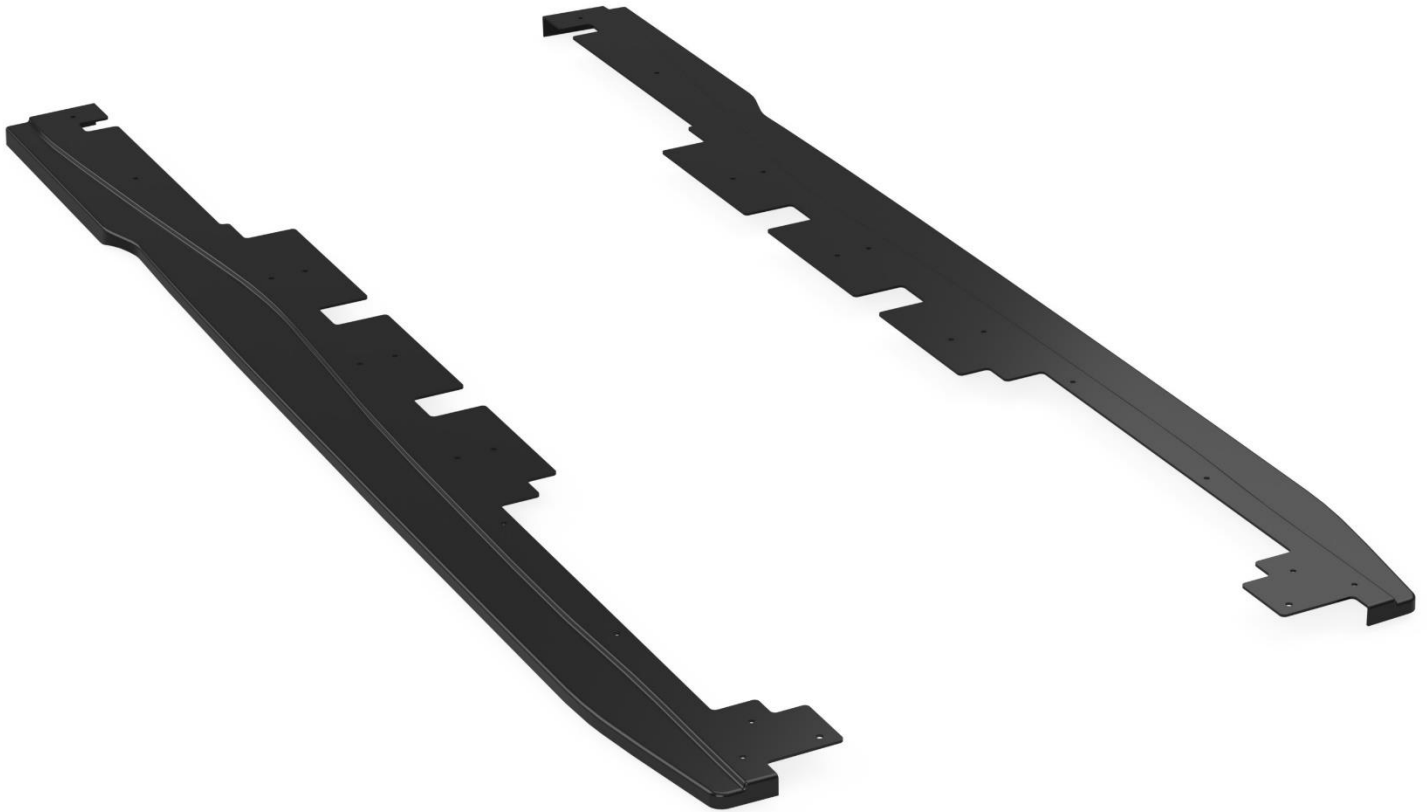

This Installation Manual is intended for the following models:

2009-2012

Nissan 370Z (Non-NISMO)

PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Motorsports 370Z ABS Side Skirts, consult with a Professional Mechanic, or contact Z1 Motorsports for more information.

PARTS INCLUDED:

Item	Quantity	Description
1	1	RH Side Skirt
2	1	LH Side Skirt
3	22	Self-Tapping Screw

TOOLS REQUIRED:

- Hydraulic Jack
- (2) 2-Ton (or greater) Jack Stands
- Ratchet
- Ratchet Extension(s)
- Electric Ratchet/Impact Driver
- Assorted Metric Sockets
- Rags
- Detailing Spray
- Rubbing Alcohol

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Only operate drivetrain in safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the Z1 Motorsports 370Z ABS Side Skirts and verify that ALL necessary hardware is present.

PROCEDURE:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Locate proper jacking points on vehicle's chassis (refer to vehicle's Owner Manual). Raise and support vehicle using jack & jack stands.
3. Starting on the Passenger Side of the vehicle, remove the (1) one bolt at the front of the side skirt, behind the front wheel. Retain this bolt. *Figure 1.*



Figure 1

4. Using Detailing Spray, clean the OE Panel of debris.
5. Use Rubbing Alcohol to remove any remaining residue.

6. Locate the Passenger Side Skirt. Remove the plastic protective cover. *Figure 2.*

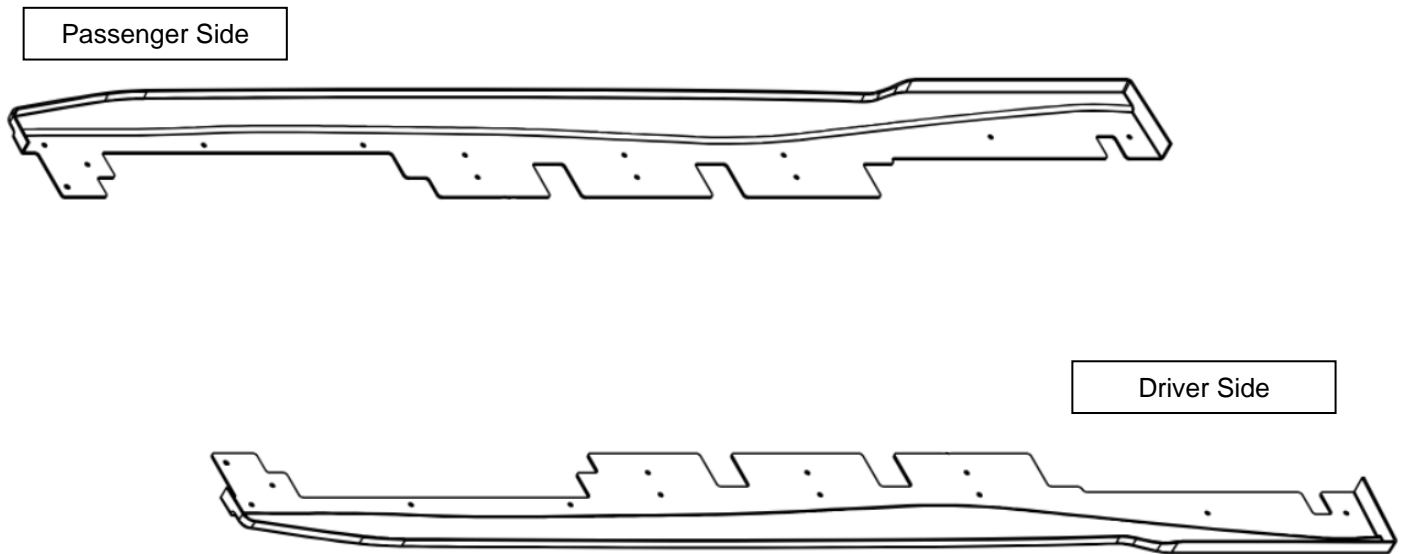


Figure 2

7. Peel up the cover of the double-side tape on the Side Skirt. *Figure 3.*



Figure 3

8. Position the Side Skirt under the vehicle and secure the front inboard mounting hole with the bolt removed in Step 3. *Figure 4.*



Figure 4

9. Align the Side Skirt to the vehicle and push up to secure it with the double-sided tape. Another person to help is useful for this step. *Figure 5.*



Figure 5

10. Locate (11) eleven Self-Tapping Screws. Using a ratchet or impact driver, install (1) one screw into each mounting hole on the bottom of the Side Skirt. *Figure 6.*



Figure 6

11. Repeat Steps 3-10 on the Driver Side of the vehicle.

END

Additional Technical Support:
Contact Z1 Motorsports at info@z1motorsports.com
Or call 770-838-7777 between 9am and 6pm ET