

Z1 370Z V2 NISMO CARBON REAR SPATS INSTALLATION MANUAL



This Installation Manual is intended for the following models:

2015-2020

Nissan 370Z (NISMO)

PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Motorsports 370Z V2 NISMO Carbon Rear Spats, consult with a Professional Mechanic, or contact Z1 Motorsports for more information.

PARTS INCLUDED:

Item	Quantity	Description
1	1	RH Spat
2	1	LH Spat
3	8	Self Tapping Screw

TOOLS REQUIRED:

- Hydraulic Jack
- (2) 2-Ton (or greater) Jack Stands
- Impact Driver
- Ratchet
- Assorted Metric Sockets
- Detailing Spray
- Isopropyl Alcohol
- Rags
- Adhesion Promotor (recommended)

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Only operate drivetrain in safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the Z1 Motorsports 370Z V2 NISMO Carbon Rear Spats and verify that ALL necessary hardware is present.

This product is intended for V2 370Z NISMO Models but will fit vehicles that have a V2 NISMO Rear Bumper installed onto their vehicle.

PROCEDURE:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Locate the proper jacking points on the vehicle's chassis (refer to the vehicle's Owner's Manual). Raise and support the vehicle using a jack and jack stands. This procedure can be done with the vehicle on the ground, but it is easier with the vehicle in the air.
3. Using Detailing Spray and a rag, clean the Rear Bumper of any dirt and debris. *Figure 1.*

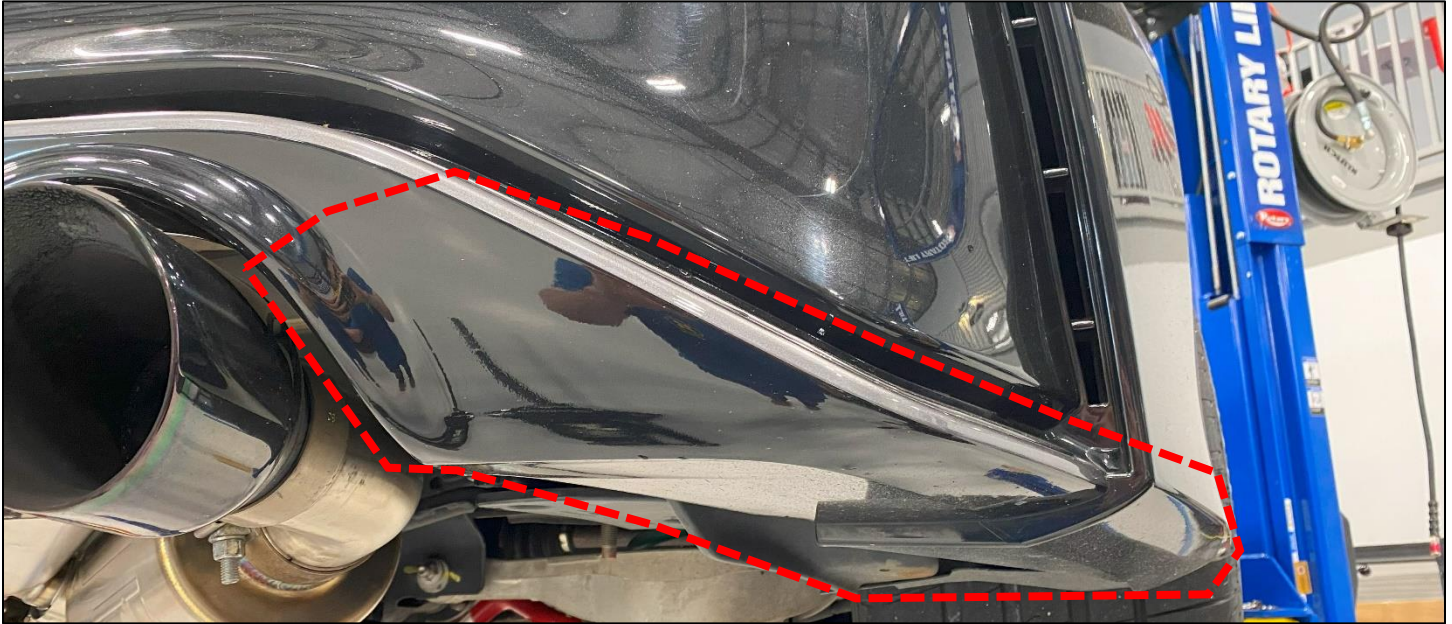


Figure 1

4. Wipe the Rear Bumper down with Isopropyl Alcohol to remove any remaining dirt and residue from the Detailing Spray and allow ample time for the Alcohol to dry.

5. Starting on the Right Side (Passenger Side) of the vehicle, hold up the RH Spat to the vehicle to confirm fitment. *Figure 2.*



Figure 2

6. Peel up a small amount of the Double-Sided Tape on the RH Spat. *Figure 3.*

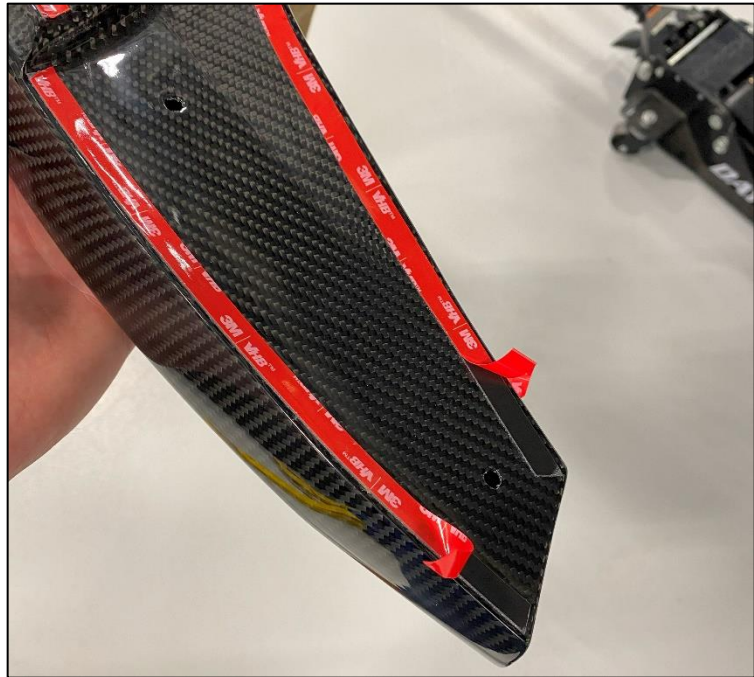


Figure 3

7. Position the RH Spat to the vehicle and press it on, adhering the Tape to the Vehicle. Check the position of the Spat and adjust if necessary. *Figure 4.*

NOTE: The use of Adhesion Promotor is highly recommended to make the Diffuser adhere to the vehicle better.



Figure 4

8. Peel the rest of the Double-Sided Tape Cover off and fully push the Spat onto the vehicle.
9. Locate (4) four Self-Tapping Screws. Using an Impact Driver and Socket, install (1) one Screw into each hole on the bottom of the Spat and through the rear Bumper. *Figure 5.*

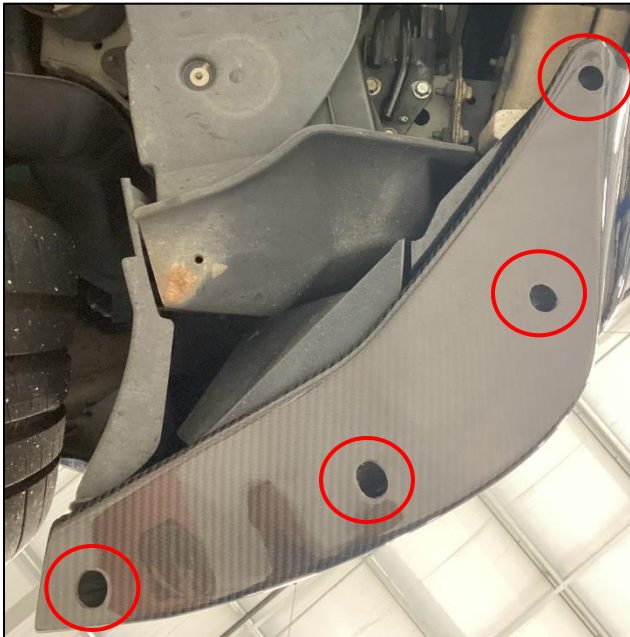


Figure 5

10. Repeat Steps 5-9 for the other side of the vehicle.



Installed Z1 370Z V2 NISMO Carbon Rear Spats

END

Additional Technical Support:
Contact Z1 Motorsports at info@z1motorsports.com
Or call 770-838-7777 between 9am and 6pm ET