

Z1 HARNESS BAR COLLARS INSTALLATION MANUAL

**PROLOGUE:**

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Motorsports Harness Bar Collars, consult with a Professional Mechanic, or contact Z1 Motorsports for more information.

PARTS INCLUDED:

Item	Quantity	Description
Belt Holder Collar		
1	2	Upper Collar
2	2	Lower Collar
3	2	Slotted Bar
4	2	M5 x 0.8 Hex Drive Flat Head Screw, 12mm
5	4	M4 x 0.7 Socket Head Screw, 14mm
Standard Collar		
6	2	Upper Collar
7	2	Lower Collar
8	4	M4 x 0.7 Socket Head Screw

TOOLS REQUIRED:

- Ratchet
- Ratchet Extension(s)
- Allen/Hex Sockets
- Allen/Hex Key

SAFETY REQUIREMENTS:

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Only operate drivetrain in safe space and well-ventilated areas.

BEFORE YOU BEGIN:

Remove contents from the Z1 Motorsports Harness Bar Collars and verify that ALL necessary hardware is present.

BELT HOLDER COLLAR:

1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
2. Install Harnesses onto the Harness bar as instructed by Manufacturer.
3. Locate the Upper Collar, Lower Collar, and (2) two M4 x 0.7 Socket Head Screws. Loosely join the Collars together with the hardware on the Harness Bar. Position it as desired to secure Harness in place and tighten the (2) two Socket Head Screws evenly. *Figure 1.*

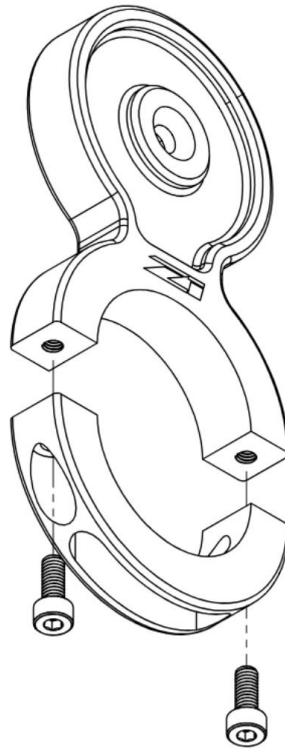


Figure 1

4. Locate the Slotted Bar. Insert the loose end of the Harness slightly through the slot. Roll the Slotted Bar and Harness together tightly. *Figure 2.*



Figure 2

5. Place the Slotted Bar into the Collar, and secure with the M5 x 0.8 Flat Head Screw. *Figure 3.*



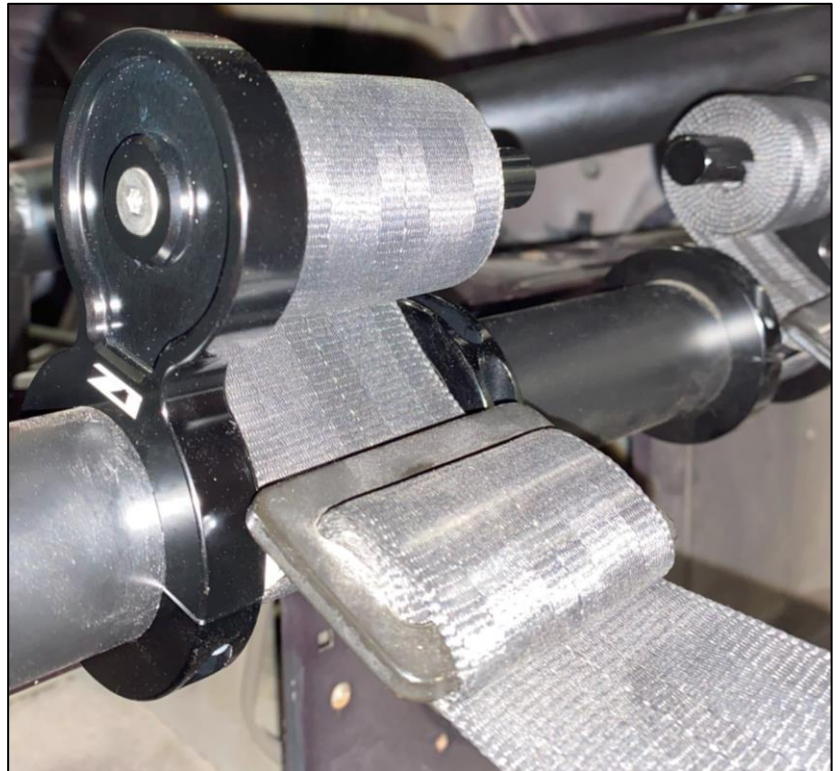


Figure 3

STANDARD COLLAR:

1. Install Harness Bar Collars on outside of Harnesses according to diagram below using the supplied items.
Figure 4.

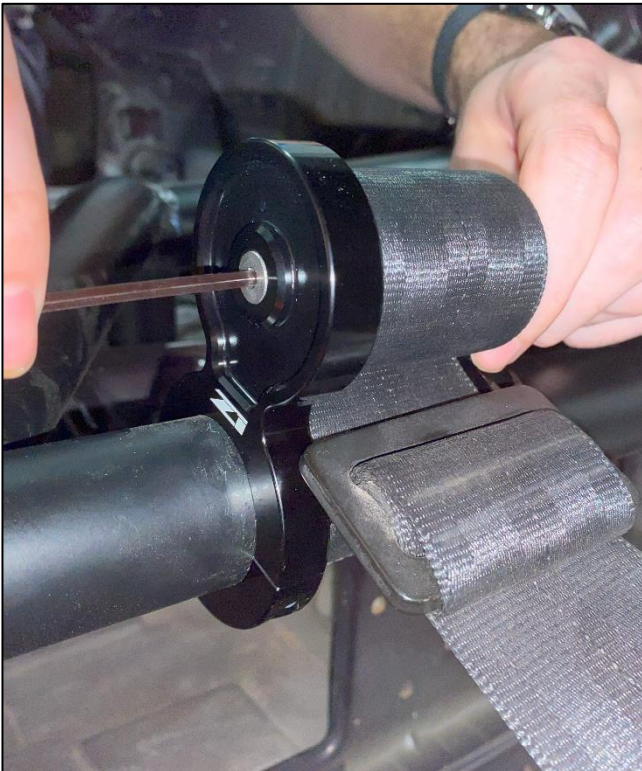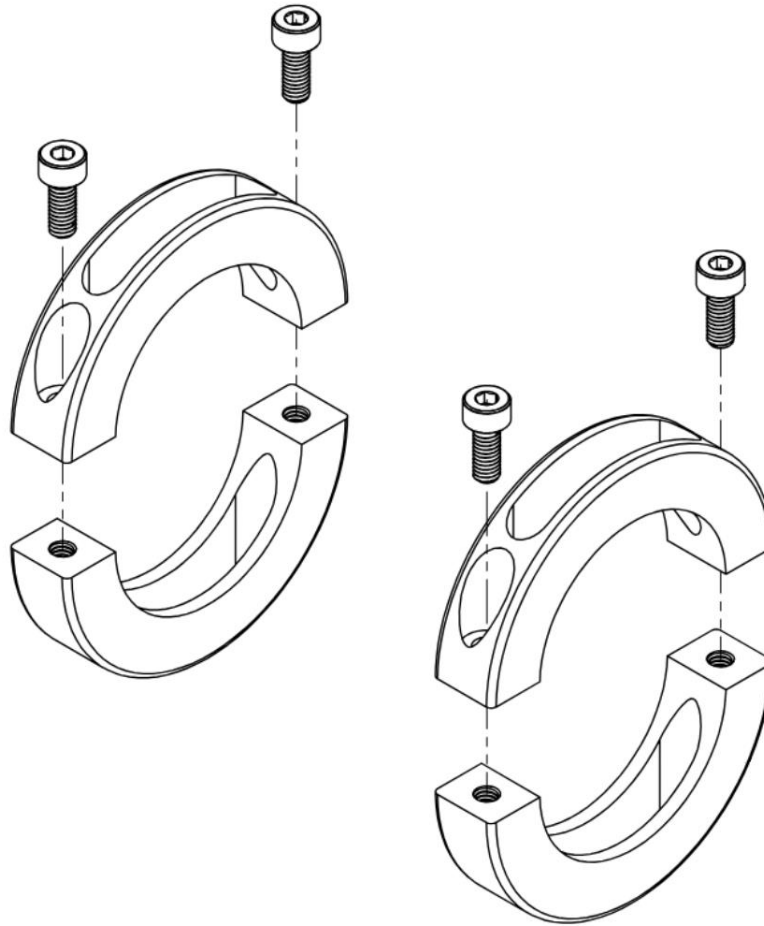

END

Additional Technical Support:

Contact Z1 Motorsports at info@z1motorsports.com

Or call 770-838-7777 between 9am and 6pm ET