

Z1 TOE PLATES REFERENCE GUIDE



PARTS INCLUDED:

Item	Quantity	Description
1	2	Z1 Toe Plate
2	2	Z1 Tape Measure

BEFORE YOU BEGIN:


Toe measurements should only be adjusted when the vehicle's camber and caster are already set and within spec. Ensure the steering wheel is straight and the vehicle is parked on a level surface.

PROCEDURE:

1. Place (1) Z1 Toe Plate against each front wheel making sure it is centered and flush with the wheel at the top and bottom of the toe plate (as shown below).




2. Extend the tape measures to the opposite side of the vehicle, with one in front of the front wheels and one behind. Then, set the tape measures in the top slots of the Z1 Toe Plates (as shown below).
3. Go back to the other side of the vehicle, position the tape measures in the same slots. While holding the toe plate against the wheel, pull the tape measures tight to take your measurements (as shown below).

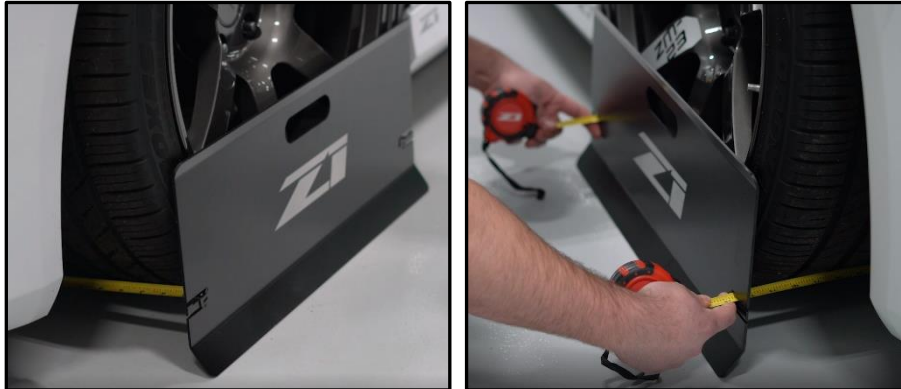

4. Measurements should be taken by comparing the lengths of the (2) tape measures. If the front tape measure is longer than the rear, the vehicle is toed out. If the rear tape measure is longer than the front, the vehicle is toed in.

Toe Angle

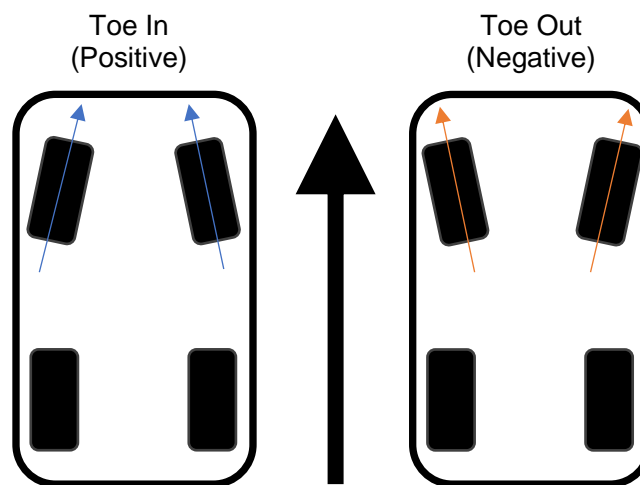

5. If your vehicle's toe is out of spec, adjust the tie rods accordingly.
6. Once your toe is set where you'd like, remove the tape measures and toe plates and perform a final test drive of vehicle.

END

Additional Technical Support:

Contact Z1 Motorsports at info@z1motorsports.com

Or call 770-838-7777 between 9am and 6pm ET