

770.838.7777
z1motorsports.com

# Z1 2023+ NISSAN Z CARBON FIBER SIDE SKIRTS INSTALLATION MANUAL



This Installation Manual is intended for the following models:2023+Nissan Z (Non NISMO Models)

#### PROLOGUE:

Study these instructions completely before proceeding to assembly. The installer must have a thorough knowledge of automotive systems operation. If unfamiliar with any of the concepts outlined in this instruction, we recommend the installation be completed by a qualified professional.

#### WARNING!

Extreme caution should be taken when performing maintenance or performance upgrades to your vehicle. Please observe and abide by any Warning or Caution labels placed on the various components and tools used when servicing your vehicle. If you have any questions regarding installation or the various components included with the Z1 Motorsports 2023+ Nissan Z Carbon Fiber Side Skirts, consult with a Professional Mechanic or contact Z1 Motorsports for more information.

	-			
Page   1	Part # 23014-IM	Revision IR	3/27/2024	JS

### PARTS INCLUDED:

Item	Quantity	Description
1	1	Carbon Side Skirt, RH
2	1	Carbon Side Skirt, LH
3	20	Steel Self-tapping Screws

### **TOOLS REQUIRED:**

- Hydraulic Jack
- (2) 2-Ton (or greater) Jack Stands
- Ratchet
- Ratchet Extension(s)
- Assorted Metric Wrenches

- Assorted Metric Sockets
- Impact Driver
- Isopropyl Alcohol
- Detailing Product

#### **SAFETY REQUIREMENTS:**

- Always wear safety glasses and any necessary protective garments. If using any fluids, chemicals, or solvents, a respirator is recommended.
- Always turn the ignition to the OFF position and disconnect the NEGATIVE battery terminal.
- Always use properly rated jack stands when working under your vehicle.
- Always keep limbs and parts away from moving drivetrain parts.
- Only operate drivetrain in safe space and well-ventilated areas.

#### **BEFORE YOU BEGIN:**

Remove contents from the Z1 Motorsports 2023+ Nissan Z Carbon Fiber Side Skirts and verify that ALL necessary hardware is present.

Page   2	Part # 23014-IM	Revision IR	3/27/2024	JS

## PROCEDURE:

- 1. Place the transmission in Park position (or in Reverse gear if equipped with a manual transmission). Apply the parking brake.
- 2. Locate proper jacking points on vehicle's chassis (refer to vehicle's Owner Manual). Raise and support vehicle using jack & jack stands.
- 3. Starting on the the Left side of the vehicle, remove the (2) two OEM Bolts, one behind the front tire (*Figure 1*), and one in front of the rear tire (*Figure 2*).

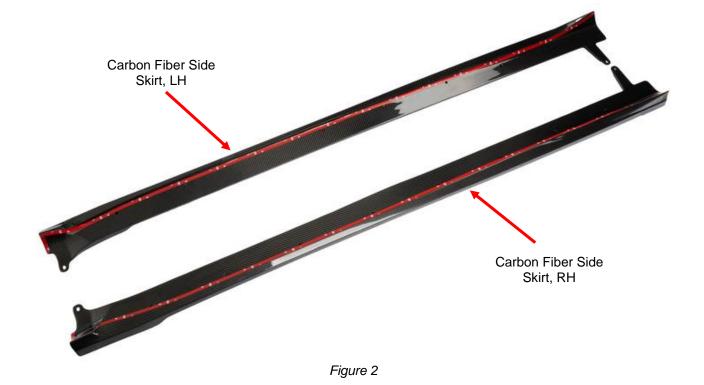






Figure 1

4. Locate the Carbon Fiber Side Skirt, LH, and hold it up to the side of the car for a test fitment. Figure 3.



Page   3	Part # 23014-IM	Revision IR	3/27/2024	JS	

- 5. Using a detailing product, wipe down and remove any debris from Side Skirt mounting points.
- 6. Use Isopropyl Alcohol to wipe down any residual detailing product, as it may contain wax, and allow a few minutes to dry.
- 7. Locate the Carbon Fiber Side Skirt, LH, and slightly peel back the double sided tape on the Side Skirt, as shown below in *Figure 4.*





Figure 3

8. Place the Carbon Fiber Side Skirt, LH, up to the mounting point, and loosely install the (2) two OEM bolts removed in *Step 3*. See *Figure 5* below.





Figure 4

Page   4	Part # 23014-IM	Revision IR	3/27/2024	JS	
					7

NOTE: Make sure the Side Skirt is located under the Factory Rubber piece as shown below in Figure 6.

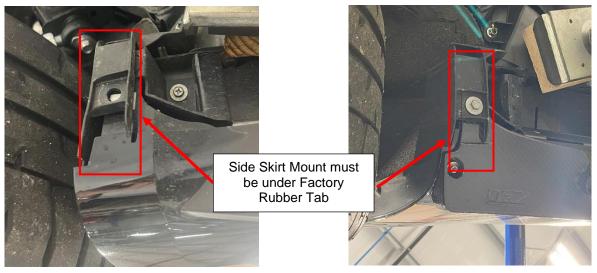


Figure 5

- 9. Peel back the rest of the Double Sided tape on the Side Skirt.
- 10. Push the Side Skirt into place.

11. Tighten the (2) two factory bolts on the ends of the Side Skirts reinstalled in Step 7.

**NOTE:** Be careful not to overtighten the bolts, as they can crack the Side Skirt if tightened too much.

Page   5	Part # 23014-IM	Revision IR	3/27/2024	JS

12. Locate (10) ten Steel Self-Tapping Screws. Using an Impact Driver, insert and drill (1) one Self-Tapping Screw into each hole along the bottom of the side skirt. *Figure 7* and *Figure 8*.

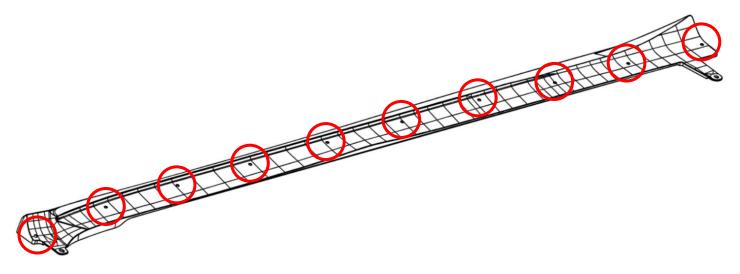


Figure 6





Figure 7

**NOTE:** Be careful not to overtigthen the Self-Tapping Screws, as they can crack the Side Skirt if tightened too much.

Page   6	Part # 23014-IM	Revision IR	3/27/2024	JS

- 13. Repeat *Steps 3-12* for the Right side of the car.
- 14. Safely lower car from jackstands.
- 15. Account for and remove any tools.



Installed Z1 2023+ Nissan Z Carbon Fiber Side Skirts

#### <u>END</u>

Additional Technical Support: Contact Z1 Motorsports at info@z1motorsports.com Or call 770-838-7777 between 9am and 6pm ET

Page   7	Part # 23014-IM	Revision IR	3/27/2024	JS