




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Utility Track Section (Bed Audio)
APPLICATION:	Cross Carline
PART NUMBER:	T99Y7 9BUWL

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Utility Track Section	
B	2	Lag Screw 3/8" x 3"	
C	2	Spacer	

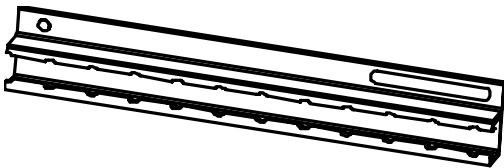

A



B




C


TOOLS REQUIRED:

- Level
- Drill
- Drill Bit : 6mm and 10mm
- Socket : 9/16"
- Driver / Torque wrench


INSTALLATION PROCEDURE:

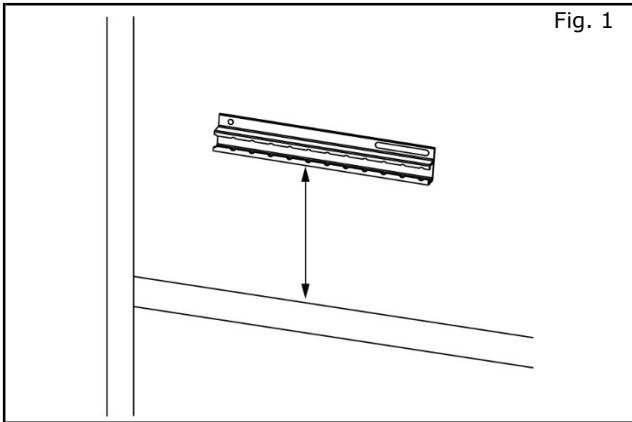


- 1) Identify suitable location in your garage to mount utility track, used to attach Bed Audio.

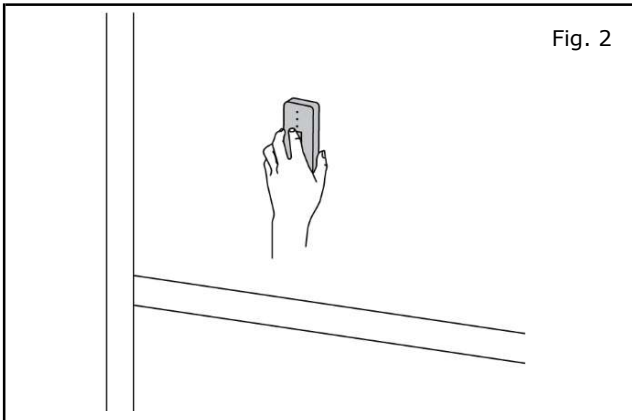

- 2) Determine the height to install. Use stud finder to locate studs and mark center of studs.

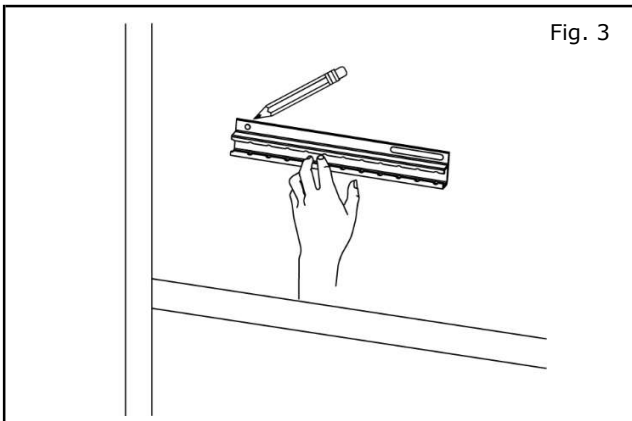


- 3) Hold Utility track section at desired height and mark the circle using the identified stud center.

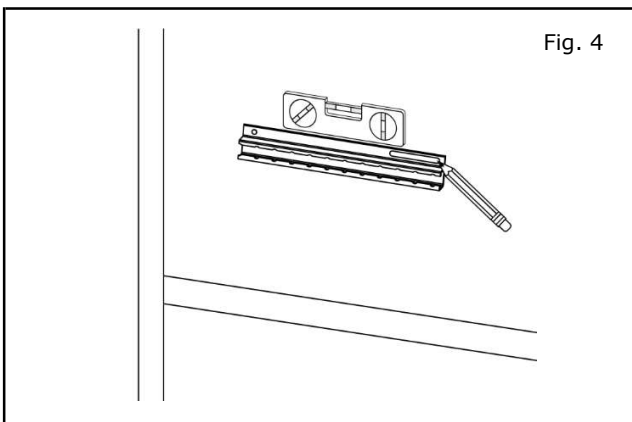


- 4) Use level and identify the 2nd hole center.

INSTALLATION PROCEDURE:

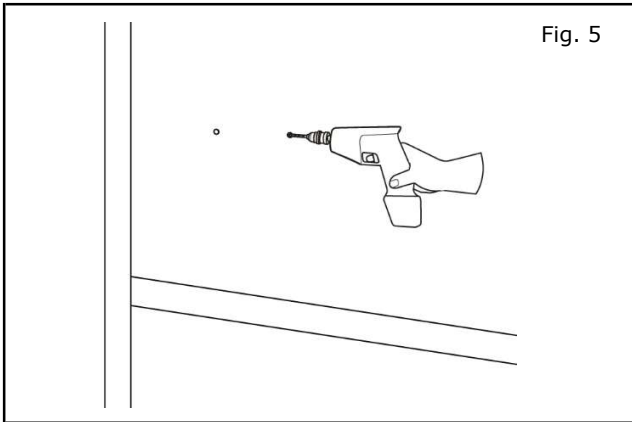


- 5) Drill pilot holes using 15/64" or 6mm drill bit on marked center locations.

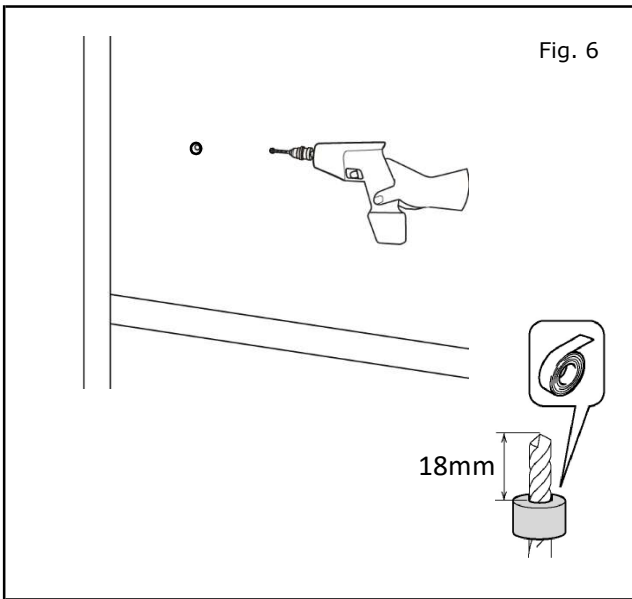

- 6) Using 10mm drill bit, drill 18mm deep hole to accommodate the shank on Lag screw.

Note:

Make sure to use tape to mark 18mm from the drill tip to control the depth.

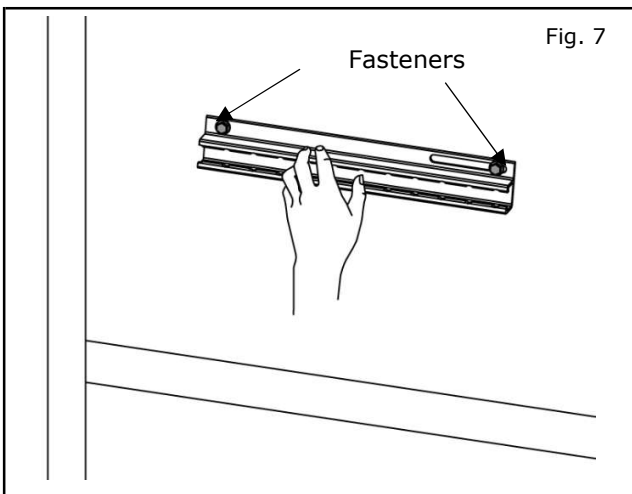

- 7) Hold utility track section in place and install the fastener.

Note:

Use Utility track section for attaching the Nissan Bed Audio unit Only.