




## GENUINE PARTS

### INSTALLATION INSTRUCTIONS

<b>DESCRIPTION:</b>	Bed Cargo Net
<b>APPLICATION:</b>	Frontier -Vehicle with utility track , Vehicle without utility track
<b>PART NUMBER:</b>	T99C1 9BU0A

#### KIT CONTENTS:

Item	Qty.	Part Description
A	1	Bed Cargo Net
B	1	Installation Instruction Replacement Template

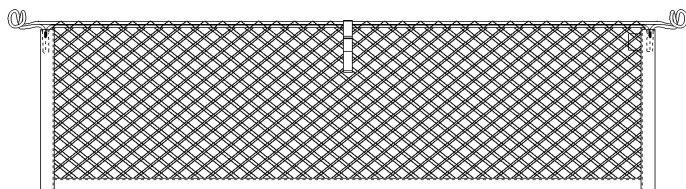

**A**



**B**

#### TOOLS REQUIRED:

- No tools required

#### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

#### INSTALLATION PROCEDURE:

NOTE: Passenger side shown. Repeat for driver side.

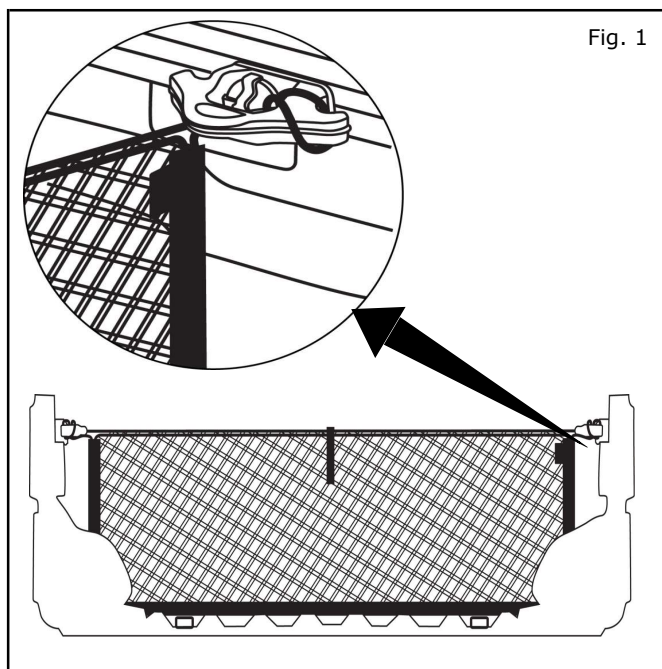


Fig. 1

#### For vehicle with utility track:

- 1) To install Bed Cargo Net, insert bungee loop through bottom of cleat and attach as shown.

## INSTALLATION PROCEDURE:

**For vehicle without utility track:**

**NOTE: with out utility track -Passenger side shown.  
Repeat for driver side.**

- 2) To install Bed Cargo Net, insert bungee loop through bottom of rope hook and attach as shown.

