





GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION:	Splash Guard - Front Kit
APPLICATION:	Frontier S/SV/Pro-4X (without over-fenders)
PART NUMBER(S)	T99J2 9BU03
REQUIRED FOR INSTALLATION:	
KIT CONTENTS:	

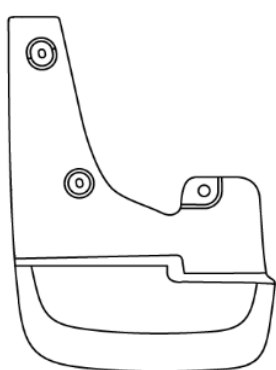


A

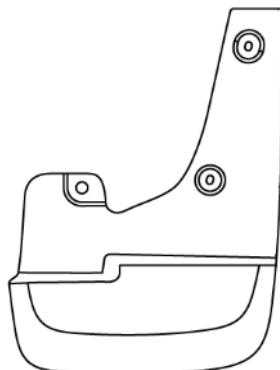

B

**Important: Read Before Installation!**

Dealer Installation Recommended.

 **WARNING**

• To avoid serious personal injury or property damage, obtain Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for a safe installation.

CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS:
Customers can obtain Installation Instructions for Infiniti or Nissan vehicles at www.Infiniti-TechInfo.com or www.Nissan-TechInfo.com respectively. From the home page, select Accessory Instructions. Select your Model, Model Year, and Accessory Type or search for your Model, and or Model Year, and or Accessory Type including Keyword or Part Number, then locate the Instructions for your accessory.

DEALER ASSIST DOWNLOAD INSTRUCTIONS:
Dealership technicians can locate the Installation Instructions for this accessory by scrolling to and select, 'Acc. Install Instructions' tab. Always download and use latest version of the Installation Instructions.

Installation Instructions Replacement Template 999V2 AW000 Rev. 07/12/15

C



D



E



F

PART NUMBER(S) **T99J2 9BU03**

**REQUIRED FOR
INSTALLATION:**

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard Front RH	Available as kit only/ Kit PN# T99J2 9BU03
B	1	Splash Guard Front LH	
C	1	Installation Instruction Website Address	
D	6	Screw M5 x 20 mm	14-51 00891
E	2	Grommet	12-81 00441
F	2	Push Pin	11296 AG000

TOOLS REQUIRED:

- Mild soap / water mixture
- Clean Rag
- #2 Phillips head screw driver
- Trim removal tool/Flat-head screw driver


INSTALLATION CAUTIONS:




CAUTION

- **Dealer installation recommended.**
- **Please read this instruction carefully before installing this product for correct installation.**
- **Please DO NOT use or install part in ways other than what is described.**
- **These installation instructions are for left side of vehicle; same procedure applies to right side.**


INSTALLATION PROCEDURE:

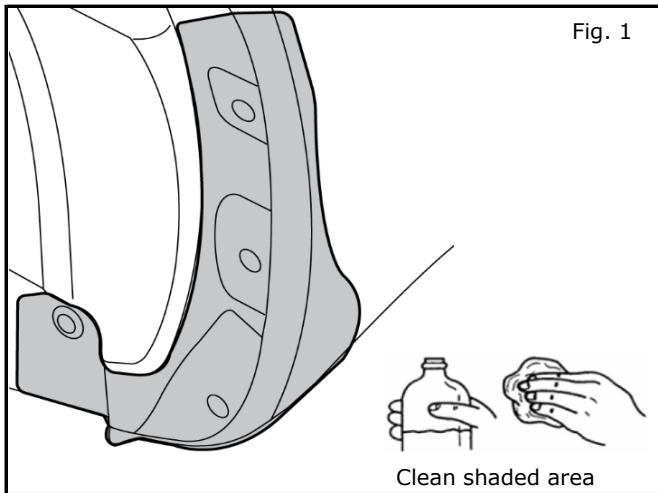

- 1) Clean shaded area with soap and water mixture and dry.

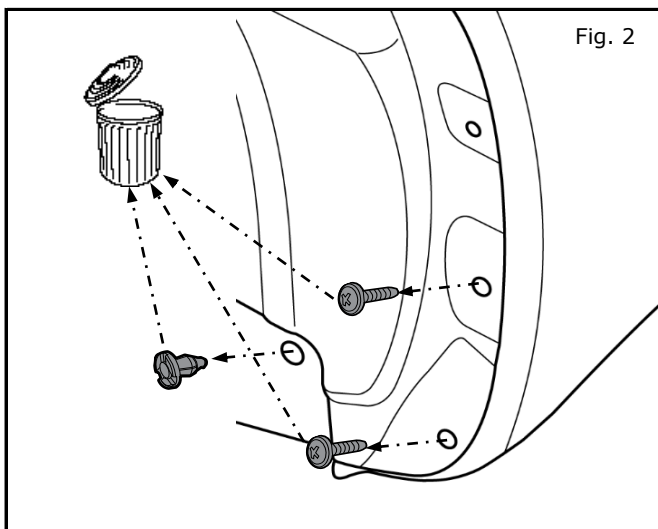


- 2) Remove two (2) existing screws and one (1) push pin and discard.

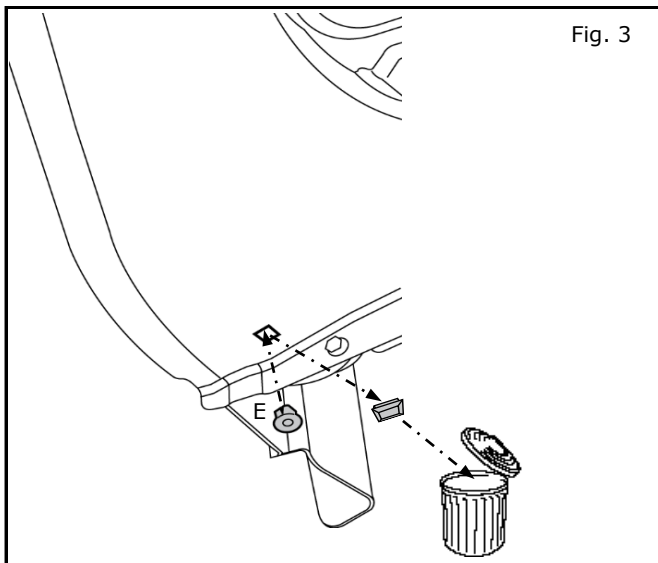

- 3) Remove and discard existing rubber plug and install one (1) grommet (E).


INSTALLATION PROCEDURE: (continue)

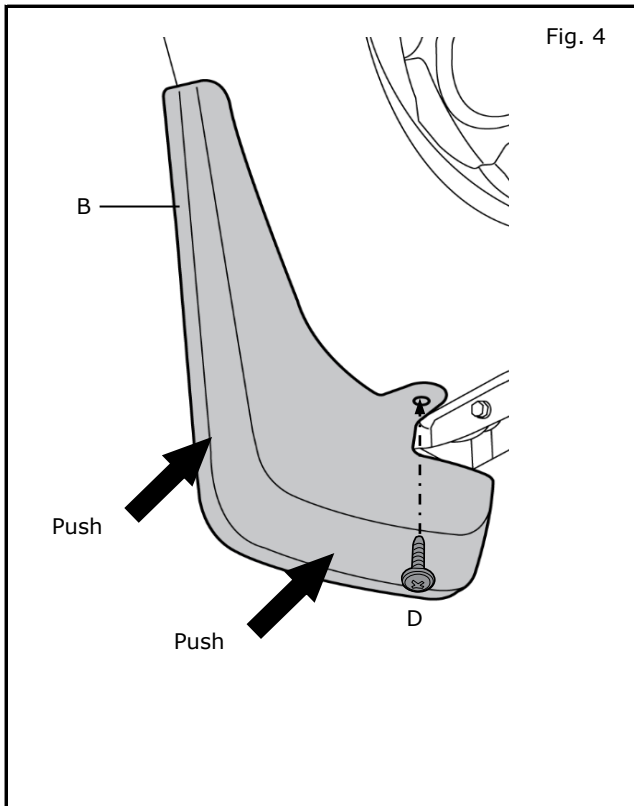

- 4) Align front splash guard to vehicle.
- 5) Hold splash guard up and into vehicle and install supplied screw- 20mm (D) in lower mount tab hole and tighten.

NOTE:

Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}

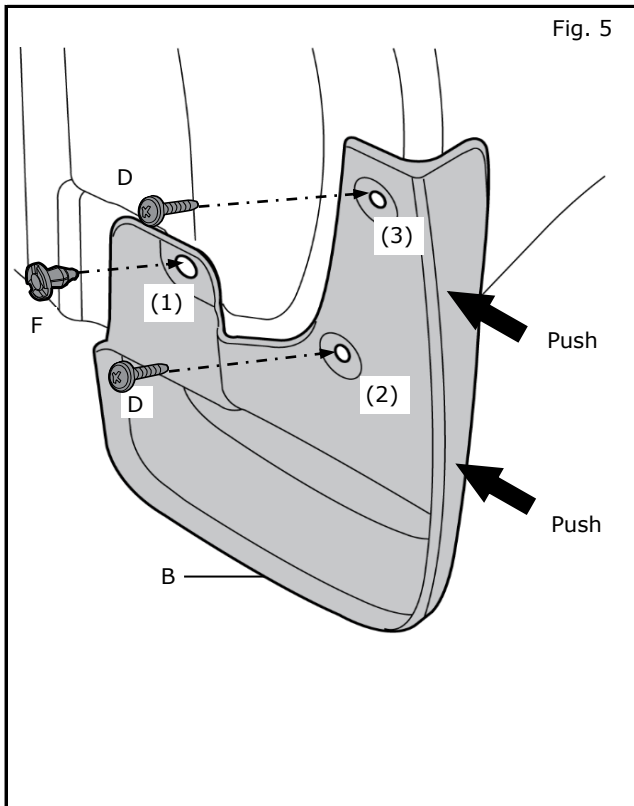

- 6) Install supplied push pin (F). Install supplied screws - 20mm (D) in middle then top hole, push up and into vehicle while tightening.

NOTE:

Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}

- 7) Repeat procedure for passenger side.