





GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION:	Splash Guard - Rear Kit
APPLICATION:	Frontier S/SV/Pro-4X (w/o over fenders)
PART NUMBER(S)	T99J2 9BU04
REQUIRED FOR INSTALLATION:	
KIT CONTENTS:	

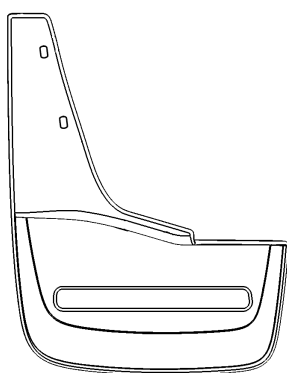


A

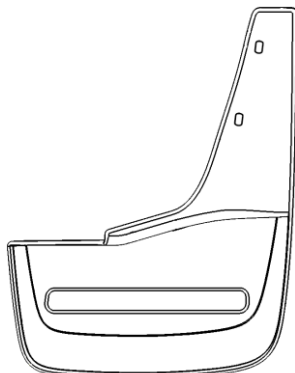

B

**Important: Read Before Installation!**

Dealer Installation Recommended.

 **WARNING**

• To avoid serious personal injury or property damage, obtain Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for a safe installation.

CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS:
Customers can obtain Installation Instructions for Infiniti or Nissan vehicles at www.Infiniti-Techinfo.com or www.Nissan-Techinfo.com respectively. From the home page, select Accessory Instructions. Select your Model, Model Year, and Accessory Type or search for your Model, and or Model Year, and or Accessory Type including Keyword or Part Number, then locate the Instructions for your accessory.

DEALER ASSIST DOWNLOAD INSTRUCTIONS:
Dealership technicians can locate the Installation Instructions for this accessory by scrolling to and select, 'Acc. Install Instructions' tab. Always download and use latest version of the Installation Instructions.

Installation Instructions Replacement Template 999V2 AW000 Rev. 07/12/15

C



D



E

PART NUMBER(S) **T99J2 9BU04**

**REQUIRED FOR
INSTALLATION:**

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard Rear RH	Available as kit only/ Kit PN# T99J2 9BU04
B	1	Splash Guard Rear LH	
C	1	Installation Instruction Website Address	
D	4	Screw M5 x 20 mm	14-51 00891
E	4	Grommet	12-81 00441

TOOLS REQUIRED:

- Mild soap / water mixture
- Clean Rag
- #2 Phillips head screw driver
- 10 mm Socket/Driver or #3 Phillips head short screw driver
- Loctite ® Blue 243 Threadlocker


INSTALLATION CAUTIONS:




CAUTION

- **Dealer installation recommended.**
- **Please read this instruction carefully before installing this product for correct installation.**
- **Please DO NOT use or install part in ways other than what is described.**
- **These installation instructions are for left side of vehicle; same procedure applies to right side.**


INSTALLATION PROCEDURE:

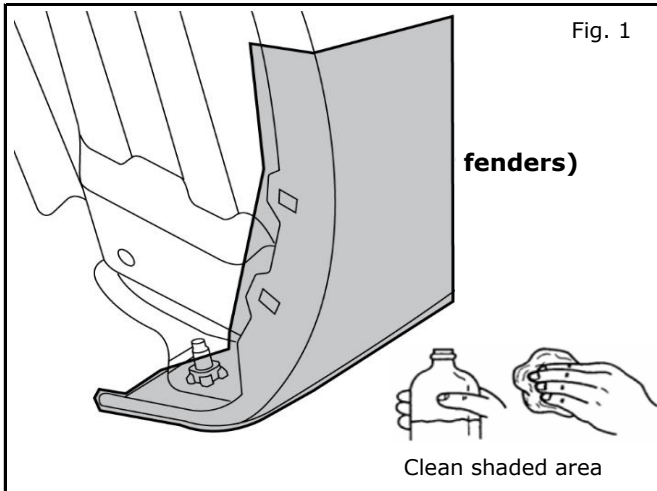

- 1) Clean shaded area with soap and water mixture and dry.

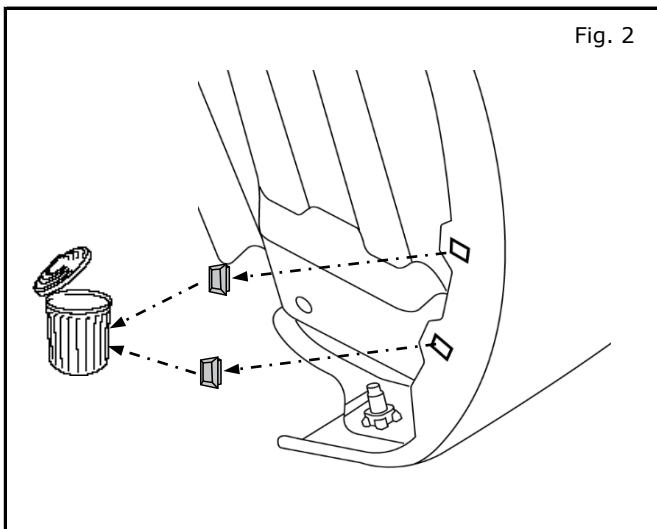


- 2) Remove existing hole plugs and discard.

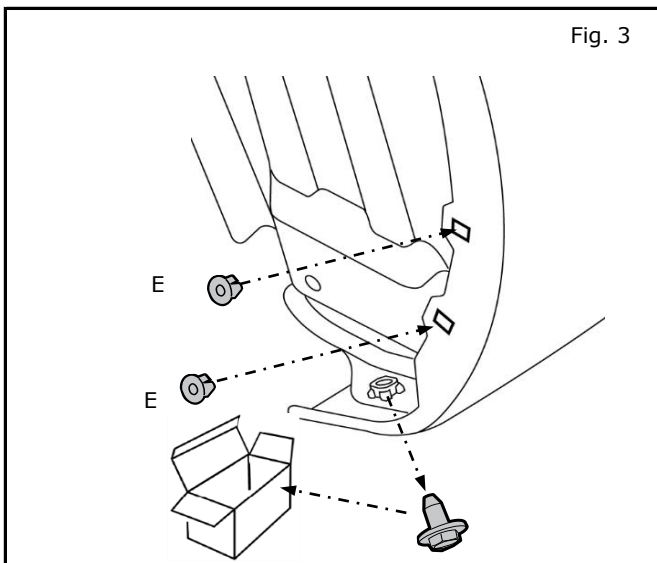

- 3) Install supplied grommets (E) in two square holes; remove and save existing M6 bolt for re-use.


INSTALLATION PROCEDURE: (continue)

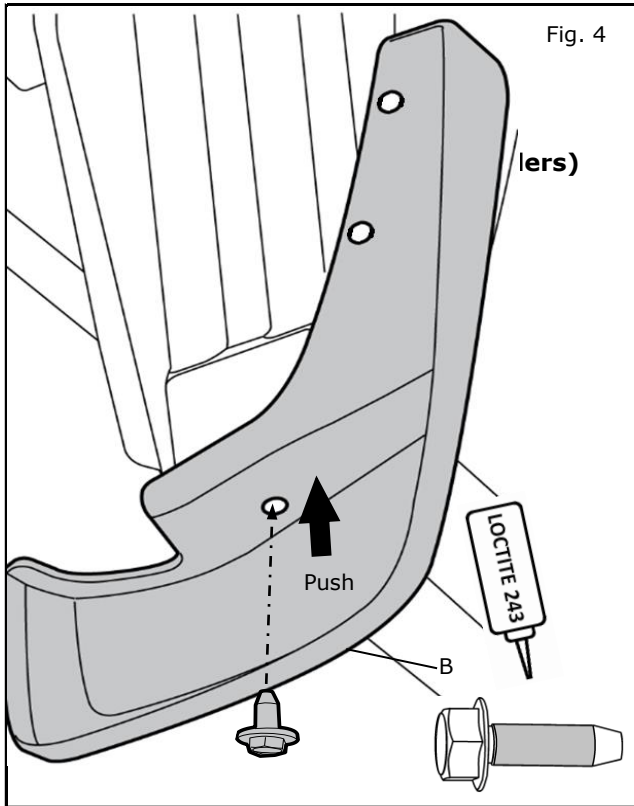

- 4) Align splash guard to vehicle.
- 5) Apply Loctite ® Blue 243 threadlocker to threads (shaded area) on M6 bolt.
- 6) Hold splash guard up and into vehicle and re-install M6 bolt.

NOTE:

Do not over tighten screws. Reference Tighten Torque: 4 N-m

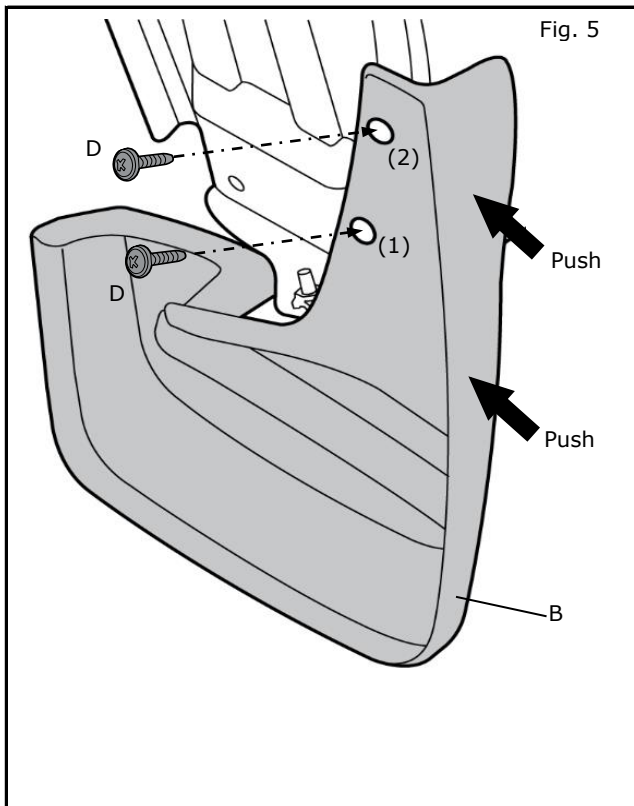

- 7) Install supplied screws - 20mm (D) in middle then top hole, push up and into vehicle while tightening.

NOTE:

Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}