





GENUINE PARTS

INSTALLATION INSTRUCTIONS


| | |
|-------------------------------|---|
| DESCRIPTION: | Mud Flap - Front Kit |
| APPLICATION: | Frontier Pro-4X/Pro-X (w/ over fenders) |
| PART NUMBER(S) | T99J2 9BU13 |
| REQUIRED FOR INSTALLATION: | |
| KIT CONTENTS: | |

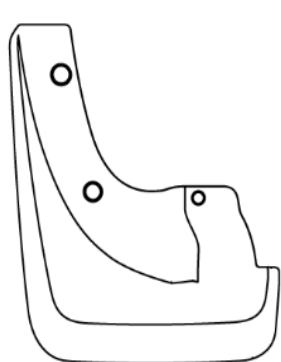


A

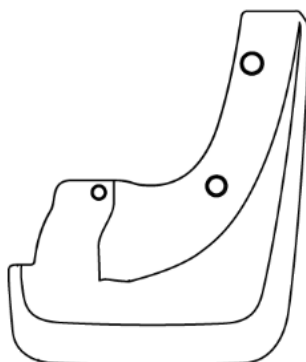

B

**Important: Read Before Installation!**

Dealer Installation Recommended.

 **WARNING**

• To avoid serious personal injury or property damage, obtain Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for a safe installation.

CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS:
Customers can obtain Installation Instructions for Infiniti or Nissan vehicles at www.Infiniti-TechInfo.com or www.Nissan-TechInfo.com respectively. From the home page, select Accessory Instructions. Select your Model, Model Year, and Accessory Type or search for your Model, and or Model Year, and or Accessory Type including Keyword or Part Number, then locate the Instructions for your accessory.

DEALER ASSIST DOWNLOAD INSTRUCTIONS:
Dealership technicians can locate the Installation Instructions for this accessory by scrolling to and select, 'Acc. Install Instructions' tab. Always download and use latest version of the Installation Instructions.

Installation Instructions Replacement Template 999V2 AW000 Rev. 07/12/15

C



D



E

PART NUMBER(S) T99J2 9BU13

**REQUIRED FOR
INSTALLATION:**

KIT CONTENTS:

| Item | Qty. | Part Description | Service Part Number |
|------|------|--|---|
| A | 1 | Mud Flap Front RH | Available as kit only/ Kit PN# T99J2 9BU13 |
| B | 1 | Mud Flap Front LH | |
| C | 1 | Installation Instruction Website Address | |
| D | 6 | Screw M5 x 20 mm | 14-51 00891 |
| E | 2 | Push Pin | 15-53 2DR9A |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

TOOLS REQUIRED:

- Mild soap / water mixture
- Clean Rag
- #2 Phillips head screw driver
- Trim removal tool/Flat-head screw driver


INSTALLATION CAUTIONS:




CAUTION

- Dealer installation recommended.
- Please read this instruction carefully before installing this product for correct installation.
- Please **DO NOT** use or install part in ways other than what is described.
- These installation instructions are for left side of vehicle; same procedure applies to right side.


INSTALLATION PROCEDURE:

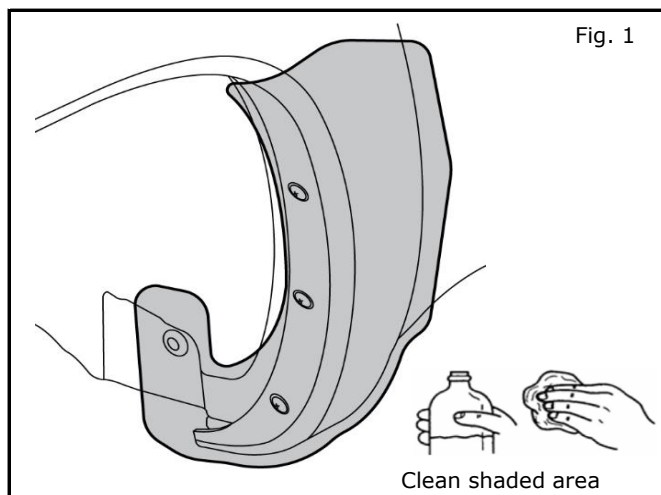

- 1) Clean shaded area with soap and water mixture and dry.

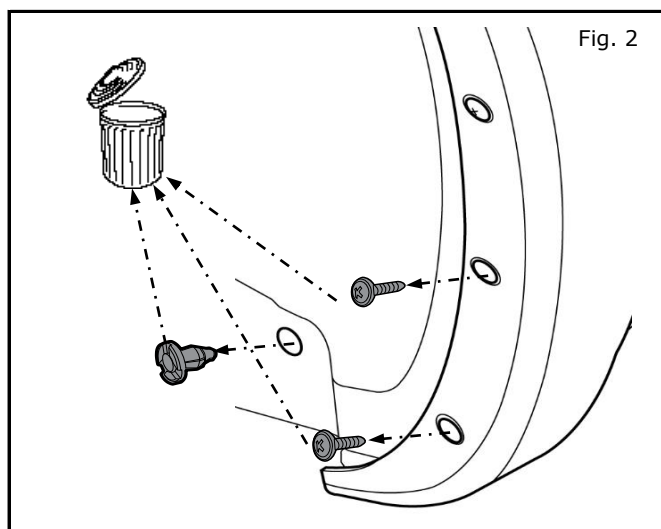


- 2) Remove two (2) existing screws and one (1) push pin and discard.

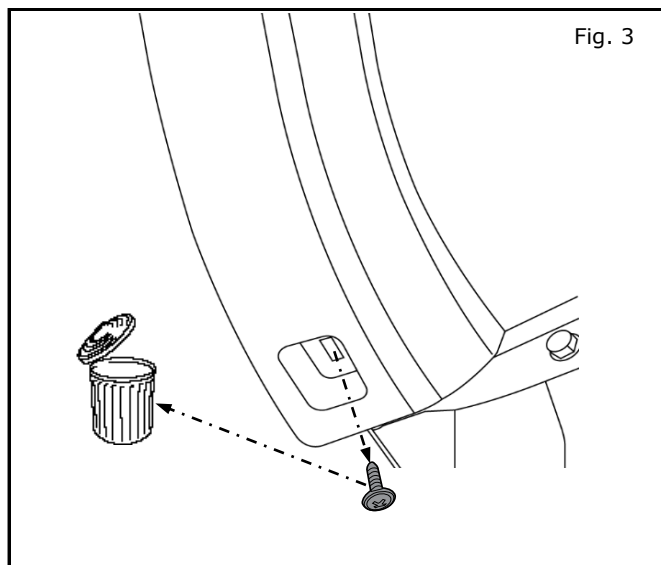

- 3) Remove one (1) existing screw and discard.


INSTALLATION PROCEDURE: (continue)

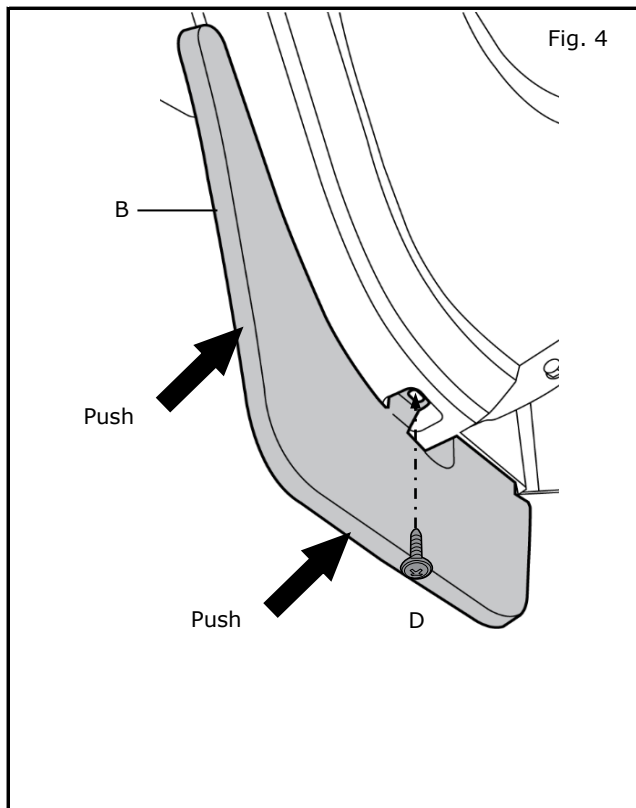

- 4) Align front mud flap to vehicle.
- 5) Hold mud flap up and into vehicle and install supplied screw- 20mm (C) in lower mount tab hole and tighten.

NOTE:

Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}

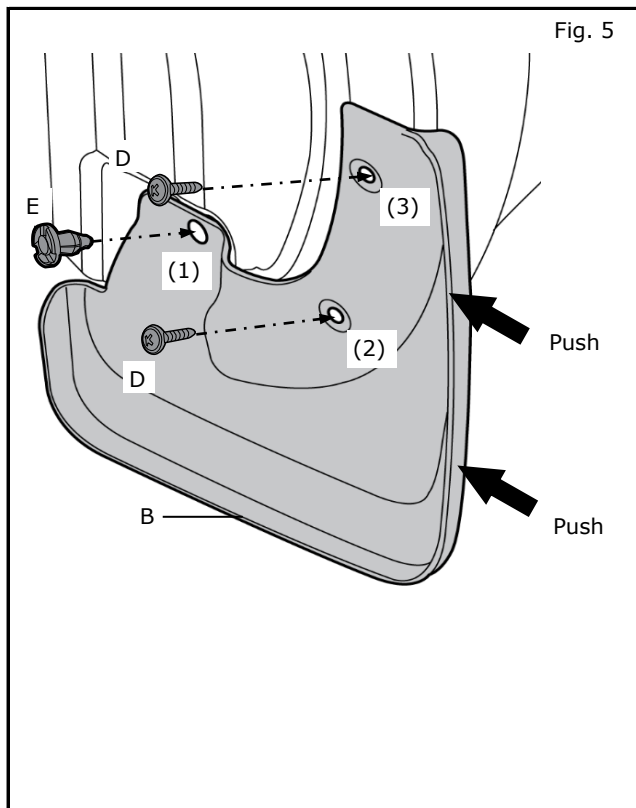

- 6) Install supplied push pin (D). Install supplied screws - 20mm (C) in middle then top hole, push up and into vehicle while tightening.

NOTE:

Do not over tighten screw. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}

- 7) Repeat procedure for passenger side.